

Model D3020

<i>Function</i>	<i>Format</i>	<i>Address Hex</i>	<i>Data Hex</i>	<i>Address Dec</i>	<i>Data Dec</i>	<i>Comment</i>
Aux 1	NEC	877C	9B	34684	155	
Aux 2	NEC	877C	C0	34684	192	
Bluetooth	NEC	877C	C2	34684	194	
Coax 1	NEC	877C	85	34684	133	
Computer	NEC	877C	91	34684	145	
Mute	NEC	877C	94	34684	148	
Optical 1	NEC	877C	89	34684	137	
Optical 2	NEC	877C	8D	34684	141	
Power Off	NEC	877C	C8	34684	200	
Power On	NEC	877C	25	34684	37	
Source Down	NEC	877C	1D	34684	29	
Source Up	NEC	877C	1A	34684	26	
Volume Down	NEC	877C	8C	34684	140	
Volume Up	NEC	877C	88	34684	136	