

M32 UPGRADE PROCEDURE

- 1) Save the upgrade file (normally a zip file) to your "My Documents" or "Desktop". Remember the file's location.
- 2) Unzip the file(s) and extract or cut and paste the file(s) to a FAT32 Formatted USB memory stick that has at least 1MB of free memory space. Use the "EJECT" feature on your computer before unplugging the USB drive.
- 3) Connect the USB memory stick (with the file(s) already stored) to the rear panel USB "SERVICE" input of the M32.
- 4) With the M32 plugged-in to a mains power source, switch ON the rear panel POWER switch. The Front panel display will illuminate.
- 5) Follow the front panel On-Screen Display and execute instructions as the upgrade procedure proceeds. The last on-screen display should be as below

M32 Bootloader Vx.xx
All update finished
Touch the power key
to exit

- 6) The upgrade procedure is completed after pressing the Standby (power) button on the top edge of the front panel and the M32 going to standby mode.