 
 


NAD C 338 Chromecast Built-In

 
IMPORTANT! Follow these installation steps to add Chromecast casting capability to your C 338 amplifier.

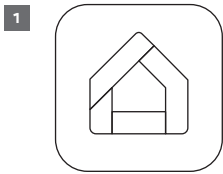


1 Install the Google Home app on your mobile device (If not already installed)

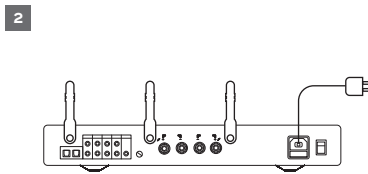


2 Plug in the NAD C 338 and connect each supplied antenna to their corresponding terminals on the rear panel

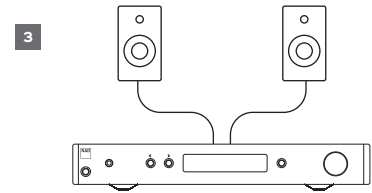

 3 Connect a pair of speakers to the amplifier's corresponding right/left speaker terminals. Double-check the speakers before powering on the amplifier

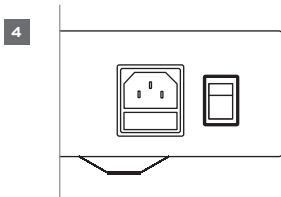


 4 Set the POWER switch to ON at the rear panel of the amplifier

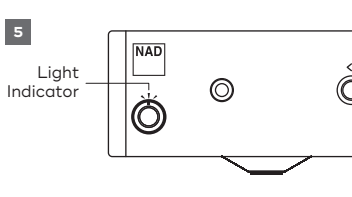

Light Indicator

 5 Press the front panel standby button and wait for the power indicator light to be a steady pulsing blue

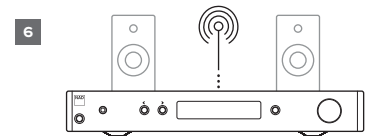

6 Your NAD C 338 is now in hotspot mode and ready for Wi-Fi setup

 
PLEASE NOTE STEP #7 applies ONLY to iOS.




7 Once the unit is in hotspot mode, go to the Settings menu



Select Wi-Fi

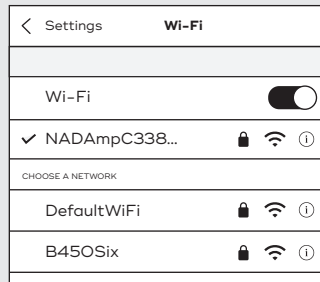

You may now select the NAD network

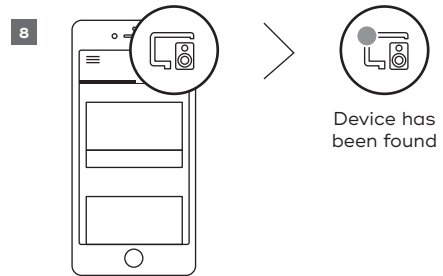 


8 Open the Google Home app. Tap **Devices** in the top right corner of the screen

Device has been found


PLEASE NOTE STEP #9 applies ONLY to Android.



 
9 Select the NAD Chromecast built-in amplifier listed and tap **Set Up > Continue**

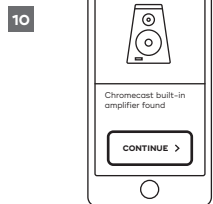

 
10 Tap **Continue** to connect to your NAD amplifier.

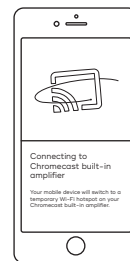

 Your mobile device will now connect to your NAD amplifier.

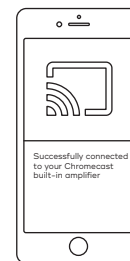


 Once your mobile device has successfully connected to the amplifier in the Google Home app, you will be directed to "Play Test Sound"

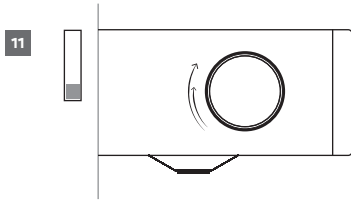

11

 Adjust the volume of your amplifier to a low but audible level and tap **Play Test Sound**

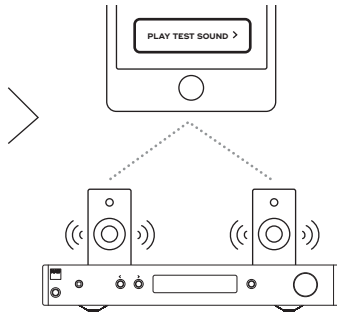


12



Tap **I Heard It** once you hear the sound play through your speakers.

If not, tap **Try Again**

 
13

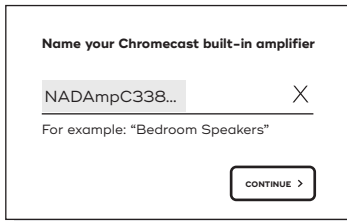



Enter the custom name of your NAD amplifier using your mobile device

NOTE
 On iOS, you will be prompted to select your country/region.
 You will be prompted with another message about your unit's manufacturer being located in a different country.

 14

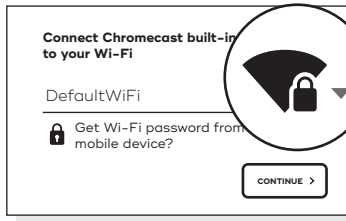

  
Select the Wi-Fi network you want to connect to your NAD amplifier

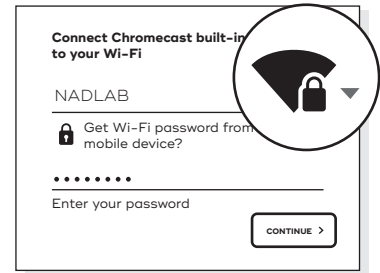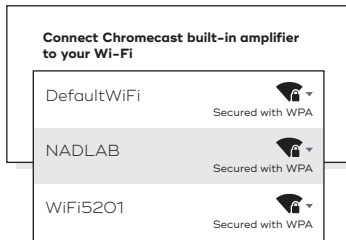

On Android, click **No Thanks** to enter the password, or tap **OK** to automatically fetch the password for this network on your mobile device


When your password is entered, tap **Continue**

 15

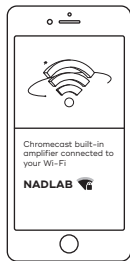

Your NAD amplifier will now attempt to connect to the provided Wi-Fi network

 16

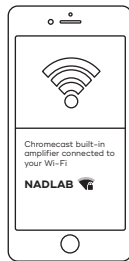

Tap **Continue** once the NAD amplifier is connected to your Wi-Fi network

NOTE
 If an update is required for your NAD amplifier, it will automatically update at this time and re-boot the amplifier when the update is complete. Follow these steps again after the amplifier has re-booted and the power indicator light is pulsing blue.

17



Chromecast Cast Button

You are now ready. Go to a music streaming app or a song stored on your mobile device and look for the cast icon to start streaming music to your C 338

Please contact support.nadelectronics.com for more information.