

AVR 5 remote control handset handles the key functions of T 758. AVR 5 is also compatible with C 390DD, T 737, T 747, T 748 and T 757. It will operate up to a distance of 10 meters (straight line) and 6 meters (±30 degrees). Alkaline batteries are recommended for maximum operating life. Two AA batteries should be fitted in the battery compartment at the rear of the remote control handset. When replacing batteries, check that they have been put in the right way round, as indicated on the base of the battery compartment.

## **IMPORTANT**

Certain keys on the AVR 5 remote control have functions tailored specifically to NAD products. Each key may offer various function descriptions. Select the function that applies to your NAD product. Additionally, consult your NAD product manual to verify if a key applies to your specific product.

#### 1 ON/OFF

AVR 5 remote control has a separate ON and OFF button.

- Press ON button to switch from Standby mode to operating mode.
- · Press OFF button to switch Standby mode.

#### 2 VOL **△**/▼

• Increase or decrease volume level

#### EO

- Toggle to select through saved Dirac filters or turn off Dirac
- Enable or disable Equalization (EQ) effect as set up at Auto Calibration.
- Bring up the adjustable Equalization parameters Frequency, Level and EQ levels.

#### SOURCE ♠/▼

• Select through enabled Sources

#### Ø (MUTE)

- Temporarily mute audio output or restore audio from mute mode
- Adjusting the volume level via VOL 
   ¬/▼ or the front panel volume knob will automatically release the mute function.
- MUTE mode is indicated by "Mute" shown in the front panel display.

## 3 SURR

· Select desired listening or surround mode



• Return to previous menu or exit from the current menu

# MENU, ▶, ENTER

 Display MAIN MENU On-Screen-Display (OSD) by pressing any of the following buttons – MENU, Dor ENTER. MAIN MENU OSD will be displayed via the connected video output device (i.e., TV).

## **●**/**▶**/**●**/**●**, ENTER

- Select an item in a menu by going left or right [¶/▶], up or down [♠/▼] and pressing ENTER to confirm a selection.
- Pressing [¶] will also return the user to the previous menu or exit from a particular menu.

## INFO

- Toggle to show in the front panel display current Source's supplied information.
- With the optional MDC DD BluOS installed, press and hold INFO to turn ON or OFF BluOS Setup menu ("BluOS Setup ON" or "BluOS Setup OFF" is displayed at the front panel display).

## 4 INPUT SELECTOR

Press "1" (as in INPUT 1) up to "9" to recall or select an assigned input. One can assign
any connected input or source to "1" (INPUT 1) and so on.

# **USING AVR 5 REMOTE CONTROL**

# A/V PSET

- Recall or select a stored A/V Preset number by pressing A/V PSET and then the numeric key corresponding to the desired A/V Preset number.
- An A/V Preset can be configured via the A/V Preset menu.

## TEST

• Initiate Speaker Test mode while at the Speaker Levels section of the Speaker Setup menu.

## 5 🖯 PRESET

- Recall or select a stored BluOS Preset number by pressing PRESET and then the numeric key corresponding to the desired BluOS Preset number.
- A BluOS Preset can be configured via the BluOS App.

# 6 ▶ || |◄◄/▶▶|

- ▶: Start or pause playback
- ▶► Go to the next song/file
- **I**← : Go to the beginning or previous song/file
- II: Pause playback (applicable only to compatible devices)