



M56

Blu-ray Disc™ Player

ENGLISH




Owner's Manual

IMPORTANT SAFETY INSTRUCTIONS

SAVE THESE INSTRUCTIONS FOR LATER USE.


FOLLOW ALL WARNINGS AND INSTRUCTIONS MARKED ON THE AUDIO EQUIPMENT.

- 1 Read instructions** - All the safety and operating instructions should be read before the product is operated.
- 2 Retain instructions** - The safety and operating instructions should be retained for future reference.
- 3 Heed Warnings** - All warnings on the product and in the operating instructions should be adhered to.
- 4 Follow Instructions** - All operating and use instructions should be followed.
- 5 Cleaning** - Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- 6 Attachments** - Do not use attachments not recommended by the product manufacturer as they may cause hazards.
- 7 Water and Moisture** - Do not use this product near water—for example, near a bath tub, wash bowl, kitchen sink, or laundry tub; in a wet basement; or near a swimming pool; and the like.
- 8 Accessories** - Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.
-  A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.
- 10 Ventilation** - Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
- 11 Power Sources** - This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company.
The primary method of isolating the amplifier from the mains supply is to disconnect the mains plug. Ensure that the mains plug remains accessible at all times. Unplug the AC power cord from the AC outlet if the unit will not be used for several months or more.
- 12 Grounding or Polarization** - This product may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
- 13 Power Cord Protection** - Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.

- 14 Outdoor Antenna Grounding** - If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

NOTE TO CATV SYSTEM INSTALLER

This reminder is provided to call the CATV system installer's attention to Section 820-40 of the NEC which provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

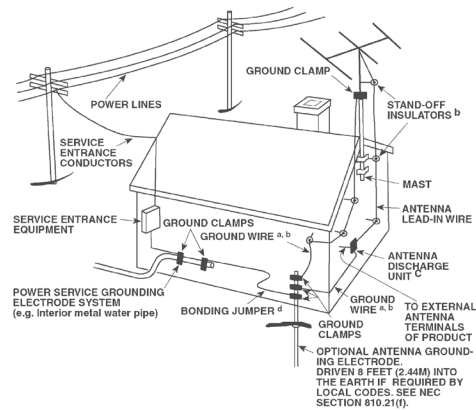

- 15 Lightning** - For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power line surges.
- 16 Power Lines** - An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.
- 17 Overloading** - Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
- 18 Object and Liquid Entry** - Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.

WARNING: THE APPARATUS SHOULD NOT BE EXPOSED TO DRIPPING OR SPLASHING, AND OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, SHOULD NOT BE PLACED ON THE APPARATUS. AS WITH ANY ELECTRONIC PRODUCTS, USE CARE NOT TO SPILL LIQUIDS INTO ANY PART OF THE SYSTEM. LIQUIDS CAN CAUSE A FAILURE AND/OR A FIRE HAZARD.

IMPORTANT SAFETY INSTRUCTIONS

- 19 Damage Requiring Service** - Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
- a) When the power supply cord or plug is damaged.
 - b) If liquid has been spilled, or objects have fallen into the product.
 - c) If the product has been exposed to rain or water.
 - d) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
 - e) If the product has been dropped or damaged in any way.
 - f) when the product exhibits a distinct change in performance-this indicates a need for service.
- 20 Replacement Parts** - When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
- 21 Safety Check** - Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.
- 22 Wall or Ceiling Mounting** - The product should be mounted to a wall or ceiling only as recommended by the manufacturer.
- 23 Heat** - The product should be situated away from heat sources such as radiators, heat registers, stoves or other products (including amplifiers) that produce heat.

WARNING

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

CAUTION

TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

CAUTION

This equipment employs a Laser System. To ensure proper use of this product, please read this owner's manual carefully and retain for future reference. Should the unit require maintenance, contact an authorized service location. Use of controls, adjustments or the performance of procedures other than those specified may result in exposure to laser radiation. To prevent direct exposure to laser beam, do not try to open the enclosure. Visible laser radiation when the enclosure is opened.

DO NOT STARE INTO BEAM.

FCC WARNING (USA NOTICE)

This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

LABELING INFORMATION

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

RF EXPOSURE STATEMENT

The antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be

located or operated in conjunction with any antenna or transmitter other than those contained in this device.

RESPONSIBLE PARTY

LENBROOK AMERICA
6 Merchant Street
Sharon, MA 02067
USA
Telephone: 800 263 4641; 781 784-8586
Facsimile: 781 784-8386

CANADA NOTICE

This Class B digital apparatus complies with Canadian ICES-003 and RSS-210. "To prevent radio interference to the licensed service, this device is intended to be operated indoors and away from windows to provide maximum shielding. Equipment (or its transmit antenna) that is installed outdoors is subject to licensing."

Operation is subject to the following two conditions :

- (1) This device may not cause Interference, and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.



THE LIGHTNING FLASH WITH ARROWHEAD SYMBOL, WITHIN AN EQUILATERAL TRIANGLE, IS INTENDED TO ALERT THE USER TO THE PRESENCE OF UNINSULATED "DANGEROUS VOLTAGE" WITHIN THE PRODUCT'S ENCLOSURE THAT MAYBE OF SUFFICIENT MAGNITUDE TO CONSTITUTE A RISK OF ELECTRIC SHOCK TO PERSONS.



THE EXCLAMATION POINT WITHIN AN EQUILATERAL TRIANGLE IS INTENDED TO ALERT THE USER TO THE PRESENCE OF IMPORTANT OPERATING AND MAINTENANCE (SERVICING) INSTRUCTIONS IN THE LITERATURE ACCOMPANYING THE APPLIANCE.



CAUTION

Changes or modifications to this equipment not expressly approved by NAD Electronics for compliance could void the user's authority to operate this equipment.

CAUTION REGARDING PLACEMENT

To maintain proper ventilation, be sure to leave a space around the unit (from the largest outer dimensions including projections) that is equal to or greater than shown below.

- Left and Right Panels: 10 cm
- Rear Panel: 10 cm
- Top Panel: 50 cm

WARNING


If this product is used at 240VAC, a suitable attachment plug should be used.

IMPORTANT SAFETY INSTRUCTIONS

EUROPEAN UNION NOTICE FOR WIRELESS PRODUCT

CE 0168  Products bearing the CE marking comply with the R&TTE Directive (1999/5/EC), EMC Directive (2004/108/EC) and the Low Directive (2006/95/EC) issued by the Commission of the European Community. Indoor use only.

NOTES ON ENVIRONMENTAL PROTECTION


 At the end of its useful life, this product must not be disposed of with regular household waste but must be returned to a collection point for the recycling of electrical and electronic equipment. The symbol on the product, user's manual and packaging, point this out.

The materials can be reused in accordance with their markings. Through re-use, recycling of raw materials or other forms of recycling of old products, you are making an important contribution to the protection of our environment. Your local administrative office can advise you of the responsible waste disposal point.

INFORMATION ABOUT COLLECTION AND DISPOSAL OF WASTE BATTERIES (DIRECTIVE 2006/66/EC OF THE EUROPEAN PARLIAMENT AND THE COUNCIL OF EUROPEAN UNION) (FOR EUROPEAN CUSTOMERS ONLY)



Batteries bearing any of these symbols indicate that they should be treated as "separate collection" and not as municipal waste. It is encouraged that necessary measures are implemented to maximize the separate collection of waste batteries and to minimize the disposal of batteries as mixed municipal waste.

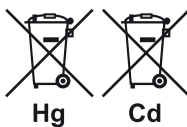

End-users are exhorted not to dispose waste batteries as unsorted municipal waste. In order to achieve a high level of recycling waste batteries, discard waste batteries separately and properly through an accessible collection point in your vicinity. For more information about collection and recycling of waste batteries, please contact your local municipality, your waste disposal service or the point of sale where you purchased the items.

By ensuring compliance and conformance to proper disposal of waste batteries, potential hazardous effects on human health is prevented and the negative impact of batteries and waste batteries on the environment is minimized, thus contributing to the protection, preservation and quality improvement of the environment.

RECORD YOUR MODEL NUMBER (NOW, WHILE YOU CAN SEE IT)


The model and serial number of your new M56 are located on the back of the cabinet. For your future convenience, we suggest that you record these numbers here:

Model no:

Serial no:

IMPORTANT SAFETY INSTRUCTIONS2

INTRODUCTION

GETTING STARTED 6
 UNPACKING AND SETUP6
 CHOOSING A LOCATION6
 DISC LOADING AND PLAYBACK6
 QUICK START6
 REGION MANAGEMENT INFORMATION7
 PLAYABLE DISCS7
 ABOUT THE  SYMBOL DISPLAY7
 BD-ROM DISC FEATURES7
 BD-ROM DISC COMPATIBILITY7

IDENTIFICATION OF CONTROLS

FRONT PANEL 8
REAR PANEL 9
M56 REMOTE CONTROL 10

OPERATION

USING THE M56 11
 USING THE HOME MENU 11
 DISPLAY THE M56 SETUP MENU 11
 NAVIGATING THE SETUP MENU OSD AND MAKING CHANGES 11
 DISPLAY DISC OSD 11
 DISPLAY SETUP MENU 11
 LANGUAGE SETUP MENU 13
 AUDIO SETUP MENU 14
 LOCK SETUP MENU
 (APPLICABLE TO BD AND DVD PLAYBACK ONLY) 15
 NETWORK SETUP MENU 16
 WIRED NETWORK 16
 WIRELESS NETWORK 17

OTHERS SETUP MENU 18
USING THE M56 - FEATURES 19
 USB MODE 19
 PLAYING AUDIO CD/MP3/WMA 19
 VIEWING A PHOTO FILE 20
 DIVX PLAYBACK 20
 USING "MY MEDIA" FEATURES 21
 ADJUSTING THE PICTURE MODE 22
 ENJOYING BD-LIVE™ OR BONUSVIEW™ IN BD-VIDEO 22
 SCREENSAVER 22
 LAST SCENE MEMORY 22
USING THE M56 – FUNCTION CONTROL 23
 AUDIO 23
 SUBTITLE 23
 ZOOM 23
 PICTURE 23
 RPT (REPEAT) 23
 MARKER, SEARCH, CLEAR 24

REFERENCE

REFERENCE TABLES 25
 RESOLUTION SETTINGS 25
 AUDIO OUTPUT SPECIFICATIONS 25
LANGUAGE CODE LIST 26
AREA CODE LIST 27
TROUBLESHOOTING 28
NOTES ON DISCS 28
 HANDLING DISCS 28
 STORING DISCS 28
 CLEANING DISCS 28
SPECIFICATIONS 29

THANK YOU FOR CHOOSING NAD.

The M56 brings NAD's penchant for performance to the exciting new Blu-ray Disc format. This Profile 2.0 Blu-ray Disc Player brims with the latest features and offers for the first time a true High Definition source for digital Home Theater systems.

As with all our products, NAD's "Music First" design philosophy guided the M56's design in such a way that it can confidently promise you state-of-the-art visual fidelity and audiophile-quality music listening for years to come. We have been careful to ensure that the M56 is as musically transparent, faithful to every video detail and spatially accurate as possible, incorporating much of what we've learned from a quarter-century's experience designing audio, video and home-theater components.

We encourage you to take a few minutes now to read right through this manual. Investing a little time here at the outset might save you a good deal of time later, and is by far the best way to ensure that you make the most of your investment in the M56.

One more thing: We urge you to register your M56 ownership on the NAD Worldwide Web site:

<http://NADelectronics.com/warranty>

For warranty information contact your local distributor.

INTRODUCTION

GETTING STARTED

UNPACKING AND SETUP

WHAT'S IN THE BOX

Packed with your M56 you will find:

- An audio/video cable connector
- The M56 remote control with 2 (two) AA batteries
- A detachable AC power cord
- HDMI cable (European version model only)
- Nero MediaHome 4 Essentials CD-ROM Disc
- This owner's manual

SAVE THE PACKAGING

Please save the box and all of the packaging in which your M56 arrived. Should you move or otherwise need to transport your M56, this is by far the safest container in which to do so. We've seen too many otherwise perfect components damaged in transit for lack of a proper shipping carton, so please: Save that box!

CHOOSING A LOCATION

Choose a location that is well ventilated (with at least several inches to both sides and behind), and that will provide a clear line of sight, within 23 feet/7 meters, between the M56's front panel and your primary listening/viewing position. This will ensure reliable infrared remote control communications. The M56 generates a modest amount of heat, but nothing that should trouble adjacent components. It is perfectly possible to stack the M56 on top of other components.

DISC LOADING AND PLAYBACK

There are two different disc sizes. Place the disc in the correct guide on the disc tray. If the disc is out of the guide, it may damage the disc and cause the M56 to malfunction. "Check Disc" appears at the On-Screen Display (OSD) ("ERROR" at the VFD), if the disc is placed upside down (and it is a single sided disc).

The following are important tips when loading a disc

- Do not push the disc tray while it is moving. Doing so may cause the M56 to malfunction.
- Do not push up the disc tray or put any objects other than discs on the disc tray. Doing so may cause the M56 to malfunction.
- Keep your fingers well clear of the disc tray as it is closing. Be especially careful with children's fingers around the closing disc tray, as there is a risk of personal injury.

Press [▶], the disc tray is automatically closed. Playback of the first track starts if a CD is loaded. For BD, DVD, USB or other disc media, playback operation is accessible through their menu screen.

NOTE

Do not move the M56 during playback. Doing so may damage the disc and the M56.

QUICK START

In case you simply cannot wait to experience the performance of your new NAD M56, we provide the following "Quick Start" instructions to get you underway.

Please make all the connections to your M56 with the unit unplugged. It is also advisable to power down or unplug all associated components while making or breaking any signal or AC power connections.

PLAY A BLU-RAY DISC

- 1 Using a compatible HDMI connector, connect the M56's HDMI OUT to the corresponding HDMI input of your HDMI-compatible TV/monitor.
- 2 Connect the supplied AC cord to the M56 AC mains input and then plug into an AC outlet. Follow the same for your HDMI-compatible TV as applicable. Switch ON your TV and set it to the HDMI input where the M56 is connected.
- 3 Set the POWER switch on the rear panel to the "ON" setting. The front panel Standby LED turns to amber and the M56 goes to standby mode.
- 4 Press the [OPEN/CLOSE] button to switch ON the M56 and at the same time open the disc tray.
- 5 Load the Blu-ray disc in the disc tray.
- 6 Press the front panel [PLAY/PAUSE] button or [▶] button of M56 remote control to close the disc tray and start playback. You should hear audio and see an image on the TV/monitor. If one or the other fails to appear, check your TV/monitor's input settings or the M56 audio/video connections.

Enjoy the movie but be sure to set aside time to read this manual thoroughly to set up and configure your M56 according to your preference.

REGION MANAGEMENT INFORMATION

The M56 is designed and manufactured to respond to the Region Management Information that is recorded on a DVD disc or Blu-ray disc. If the Region or BD code described on the disc does not correspond to the Region or BD code shown on the M56 rear panel, the M56 cannot play that disc. The disc tray automatically opens after the OSD briefly displays "This disc has been coded for Region _ only and will not play in this machine. Please eject this disc and play only on a Region _ player." (BD only) or "Check Regional Code"(DVD only)" when an incompatible Region or BD disc is loaded.

PLAYABLE DISCS

The M56 has exceptional playability. It has support for the following disc formats

- Blu-ray Disc (BD), BD-R/RE discs that contain audio titles, DivX, MP3, WMA or Photo files.
- DVD-Video, DVD±R, DVD±RW discs that contain audio titles, Movie, DivX, MP3, WMA or Photo files.
- Audio CD, CD-R/RW discs that contain audio titles, DivX, MP3, WMA or Photo files.
- Advanced Video Codec High Definition (AVCHD) format discs.

ADVANCED VIDEO CODEC HIGH DEFINITION (AVCHD)


AVCHD video format is recorded using the MPEG-4 AVC/H.264 video compression codec. It is a high definition digital video camera format used to record SD (standard definition) or HD (high definition) signals. The MPEG-4 AVC/H.264 format enables a HD video signal shot on a digital video camera recorder to be recorded on DVDs in the same way as that of SD television signal.

"AVCHD" and the "AVCHD" logo are trademarks of Matsushita Electric Industrial Co., Ltd. and Sony Corporation.

NOTES

- *You cannot playback discs other than those listed above. To do so may render the M56 permanently inoperable.*
- *An AVCHD formatted disc will not play if it is not correctly finalized.*
- *Depending on the recording condition, some AVCHD format discs may not play.*

ABOUT THE  SYMBOL DISPLAY

 may appear on your TV display during operation. This indicates that the function you entered or try to execute is not available on that specific disc or file.

BD-ROM DISC FEATURES

BD-ROM (Blu-ray Disc Read-Only Memory) is a commercially produced disc and available in the same capacities as that of regular Blu-ray discs. Other than conventional movie and video contents, BD-ROM has enhanced features such as interactive content, menu operations, pop-up menus, subtitle selection, slideshow and other features.

BD-ROM Discs can store 25 GB (single layer) or 50 GB (dual layer) on a single sided disc - about 5 to 10 times the capacity of a DVD. BD-ROM Discs also support the highest quality HD video available in the industry (up to 1920 x 1080) - large capacity means no compromise on video quality. Furthermore, a BD-ROM disc has the same familiar size and look as DVD.

The following BD-ROM disc features are disc dependent and will vary. Appearance and navigation of features will also vary from disc to disc. Some features may not be available on some discs.

VIDEO HIGHLIGHTS

The BD-ROM format for movie distribution supports three highly advanced video codecs, including MPEG-2, MPEG4 AVC (H.264), and SMPTE VC1. The 1920 x 1080 HD and 1280 x 720 HD video resolutions are also available.

HIGH-DEFINITION PLAYBACK

To view high-definition contents from BD-ROM discs, an HDTV is required. Some discs may require HDMI OUT for viewing of high-definition contents. Ability to view high-definition contents in BD-ROM discs maybe limited depending on the resolution of your TV.

GRAPHIC PLANES

Two individual full HD resolution (1920x1080) graphic planes (layers) are available on top of the HD video layer. One plane is assigned to video-related, frame accurate graphics (like subtitles), and the other plane is assigned to interactive graphic elements, such as buttons or menus. For both planes, various wipes, fades and scroll effects may be available.

MENU SOUND

When you highlight or select a menu option, sound can be heard such as button clicks or a voice-over explaining the highlighted menu choice.

MULTI-PAGE/POP-UP MENUS

With DVD-Video, playback is interrupted each time a new menu screen is accessed. Due to BD-ROM disc's ability to preload data from the disc without interrupting playback, a menu can consist of several pages. You can browse through the menu pages or select different menu paths, while the audio and video remain playing in the background.

INTERACTIVITY

Certain BD-ROM Discs may contain animated menus and/or trivia games.

USER BROWSABLE SLIDESHOWS

With BD-ROM Discs, you can browse through various still pictures while the audio remains playing.

SUBTITLES

Depending on what is contained on the BD-ROM disc, you may be able to select different font styles, sizes and colors for some subtitles. Subtitles may also be animated, scrolled or faded in and out.

BD-J INTERACTIVE CAPABILITY

The BD-ROM format supports Java for interactive functions. "BD-J" offer content providers almost unlimited functionality when creating interactive BD-ROM titles.

BD-ROM DISC COMPATIBILITY

The M56 supports BD-ROM Profile 2. Aside from the BONUSVIEW function, the M56 supports BD-Live (BD-ROM version 2 Profile 2) discs that allow usage of interactive functions when the M56 is connected to the internet.


The M56 is also compatible with discs supporting BONUSVIEW (BD-ROM version 2 Profile 1 version 1.1/Final Standard Profile) that enables Virtual packages or Picture-in-Picture functions.

NOTES

- *Viewing high-definition content and up-converting standard DVD content may require an HDMI-capable input or HDCP-capable DVI input on your display device.*
- *Dolby TrueHD, Dolby Digital Plus and DTS-HD Master Audio are supported with maximum 7.1 channels when HDMI OUT is the selected audio output port.*
- *You can use the USB flash drive that is used to store some disc related information, including downloaded on-line content. The disc you are using will control how long this information is retained.*

IDENTIFICATION OF CONTROLS

FRONT PANEL

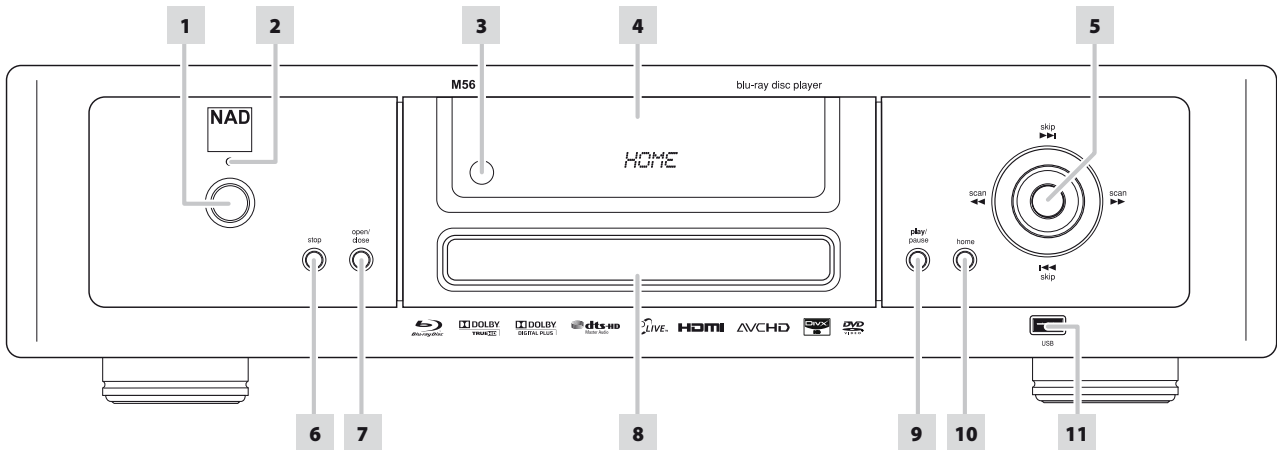

1 STANDBY: With the rear panel POWER switch set to ON position, press this button to switch ON the M56 from standby mode. The Standby LED indicator will turn from amber to blue and illuminate the vacuum fluorescent display window. If there is disc loaded, the display window will show the playback time status of the disc. If there is no disc loaded, the VFD will briefly show "NO DISC" and thereafter show the default display "HOME". Pressing the [▲] button of the M56 remote control or front panel's [OPEN/CLOSE] button will switch ON the M56 from standby mode and at the same time open the disc tray. The M56 can also be switched ON from standby mode by pressing the [ON] or [▶] (Play) buttons of the remote control. Pressing the standby button again turns the unit back to standby mode.

2 STANDBY LED: This indicator will light up amber when the M56 is in standby state. When the M56 is at ON state, this indicator will illuminate blue.

3 REMOTE SENSOR: Point the M56 remote control at the remote sensor and press the buttons. Do not expose the remote sensor of the M56 to a strong light source such as direct sunlight or illumination. If you do so, you may not be able to operate M56 with the remote control.

Distance: About 23 ft (7 m) from the front of the remote sensor

Angle: About 30° in each direction of the front of the remote sensor

4 VACUUM FLUORESCENT DISPLAY (VFD): If there is disc loaded, the display window will show the elapsed playback time of the current track/file/chapter (and track number; applicable for CD playback only). If there is no disc inside, the VFD will briefly show "NO DISC" and thereafter show the default display "HOME".

5 ◀◀/▶▶, ◀◀/▶▶, ENTER: Press [▶▶] to skip forward or [◀◀] to skip backward a track, file or chapter.

Press [◀◀/▶▶] to scan fast-forward or fast-reverse during playback. Each time the button is pressed, the speed increases until the maximum level is reached. The scanning speed is indicated by trailing icons "◀" or "▶" as shown in the OSD and may vary by disc type. The speed will be retained even after the button is released; press [PLAY/PAUSE] to resume normal playback.

The front panel ◀◀/▶▶, ◀◀/▶▶ and ENTER buttons respectively simulate the same functions of the ▲/▼/◀/▶ and ENTER buttons of the M56 remote control under the following conditions or options only

- Navigating through the HOME menu and SETUP menu.
- Select through DivX or PHOTO files as contained in a disc.

Outside of the above conditions, the ◀◀/▶▶ and ◀◀/▶▶ buttons normally function as SKIP and SCAN modes.

6 STOP: Except for BD playback, pressing this button will stop and at the same time pause playback of the disc. Press [PLAY/PAUSE] button to resume play from the spot it was stopped. For BD playback, pressing the [STOP] button will fully stop the playback and will return you to the TITLE or MENU option of the disc.

7 OPEN/CLOSE: Press this button to open and close the disc tray.

8 DISC TRAY: With the disc tray open, insert a Blu-ray disc (BD), DVD, CD or other compatible media disc face down onto the tray.

"Check Disc" appears at the On-Screen Display (OSD) ("ERROR" at the VFD), if the disc is placed upside down (and it is a single sided disc). The disc tray will then automatically open.

9 PLAY/PAUSE: This dual-function button alternates between starting and stopping playback. Press this button to toggle between Play and Pause of a BD, DVD, CD or other compatible media disc. Press to start play or resume play after Pause. If the disc tray is open, press this button to automatically close the tray and start playback if a CD disc is loaded.


During playback, press this button to stop playback temporarily, keeping the optical pickup at its current position on the disc. To resume playback at the exact point where it stopped, press [PLAY/PAUSE] again.

10 HOME: Press to access all the media for playback and setup of the M56. Refer also to the "USING THE HOME MENU" section of "USING THE M56" under the "OPERATION" main heading.

11 USB INPUT: Connect an external USB device into this input. Refer also to the "USB MODE" section of "USING THE M56 – FEATURES" under the "OPERATION" main heading.

NOTE

Not all media support maximum speeds for scanning.

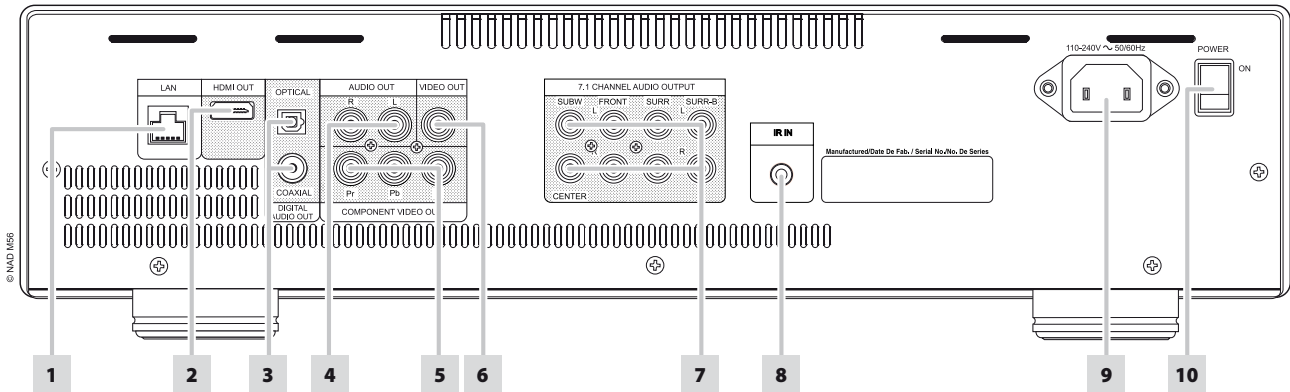

ATTENTION!

Please make sure that the M56 is powered off or unplugged before making any connections. It is also advisable to power down or unplug all associated components while making or breaking any signal or AC power connections.

1 LOCAL AREA NETWORK (LAN) PORT: Using a commercially available straight LAN cable (Category 5/CAT5 or better with RJ45 connector), connect this LAN port to the corresponding port of your modem or router. By connecting the M56 to broadband internet, you can playback a disc that offers BD-Live function. Refer also to the "NETWORK SETUP MENU" section of "USING THE M56" under the "OPERATION" main heading.

NOTES

- NAD is not responsible for any malfunction of the M56 and/or the internet connection due to communication errors or malfunctions associated with your broadband internet connection or other connected equipment. Contact your Internet Service Provider (ISP) for assistance or the service bureau of your other equipment.
- Contact your ISP for policies, charges, content restrictions, service limitations, bandwidth, repair and other related issues pertinent to internet connectivity.
- Some disc related material available through internet may not be compatible with the M56. Contact the producer of the disc for questions about such content availability or compatibility.

2 HDMI OUT: Using a HDMI cable (supplied only for European version model), connect the HDMI OUT jack to the corresponding HDMI input jack of a compatible equipment like a HDTV, a projector or an A/V Receiver.

Dolby TrueHD, Dolby Digital Plus and DTS-HD Master Audio are supported with maximum 7.1 channels when HDMI OUT is the selected audio output port. Make sure to connect to an amplifier or receiver with a built-in (Dolby Digital, Dolby Digital Plus, Dolby TrueHD, Dolby Digital Plus, DTS-HD Master Audio and other applicable formats) decoder to playback applicable multichannel audio formats.

WARNING

Before connecting and disconnecting any HDMI cables, both the M56 and the ancillary source must be powered OFF and unplugged from the AC outlet. Failure to observe this practice may cause permanent damage to all equipment connected via HDMI sockets.

IMPORTANT NOTICE

If your HDMI equipped TV is not capable of decoding DTS or Dolby Digital Bitstream, set the M56's HDMI or SPDIF setting at the "Audio Setup Menu" to "PCM Stereo". There may be a rushing noise heard if your TV is not capable of decoding the DTS (or Dolby Digital) Bitstream; most TVs do not have this capability.

3 DIGITAL AUDIO OUT (COAXIAL, OPTICAL): The digital playback audio output signal is available at these ports. Connect the optical or coaxial digital OUT ports to the corresponding S/PDIF digital input of an amplifier, receiver, computer soundcard or other digital processors.

4 AUDIO OUT: This analog audio output can be connected to the corresponding analog audio input of a compatible equipment like an amplifier, receiver, TV or stereo system.

5 COMPONENT VIDEO OUT: Connect to the corresponding component video input of a compatible equipment like a monitor/television, projector, A/V receiver or processor. Be sure to observe consistency in connecting the appropriate Y, Pb, Pr jacks to the corresponding sources/inputs. Do not rely purely on the color coding of the jacks, which may not always be consistent among brands.

6 VIDEO OUT: Connect to the corresponding composite video input of a compatible monitor/television, projector, A/V receiver or processor using quality dual-RCA cable designed for video signals.

7 7.1 CHANNEL AUDIO OUTPUT: The M56 contains a multi-channel decoder. It enables playback of discs recorded in multi-channel surround without the need for an optional decoder. Connect to the corresponding multi-channel audio input of a receiver or a processor.


8 IR IN: This input is connected to the output of an IR (infrared) repeater (Xantech or similar) or the IR output of another component to allow control of the M56 from a remote location. Most NAD products with IR OUT are fully compatible with the M56.

9 AC MAINS INPUT: The M56 comes supplied with a separate AC Mains cable. Before connecting the cable to a live wall socket, ensure first that it is firmly connected to the M56's AC Mains input socket. Always disconnect the AC Mains cable plug from the live wall socket first, before disconnecting the cable from the M56's Mains input socket.

10 POWER SWITCH: The POWER switch supplies the master AC mains power for the M56. When this switch is at ON position, the M56 is in standby mode as shown by the amber status condition of the standby LED. Toggle the front panel's STANDBY button to switch ON the M56 or back to standby mode. If you intend not to use the M56 for long periods of time (such as when on vacation), switch OFF the POWER switch. The front panel STANDBY button or M56 remote control's [ON] button cannot activate the M56 when the POWER switch is switched OFF.

IDENTIFICATION OF CONTROLS

M56 REMOTE CONTROL

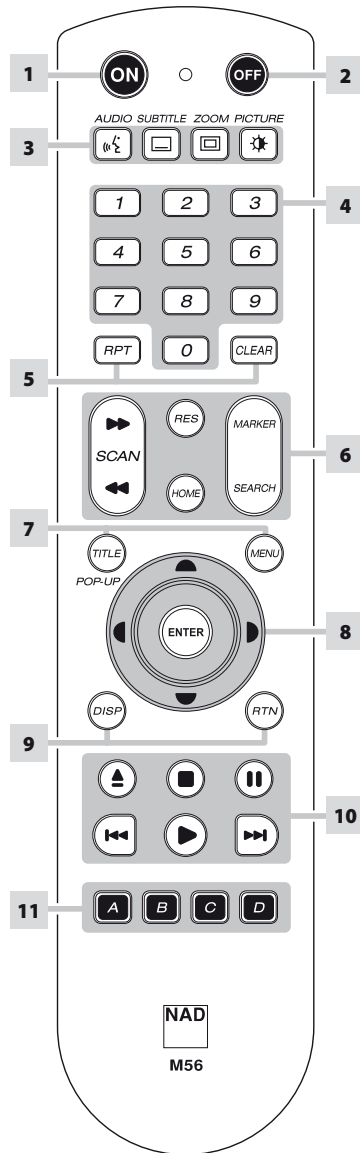

1 ON: Switch M56 ON.

2 OFF: Switch M56 OFF.

3 AUDIO: Select an audio language.
SUBTITLE: Select a subtitle language.
ZOOM: Enlarge video image.
PICTURE: Display or exit the Picture Mode menu.

4 0-9 number buttons: Select numbered items in a menu.

5 RPT: Repeat track, chapter, title, file, folder, all.

CLEAR: Remove a marker on the search menu or a number when setting the password.

6 SCAN ◀◀/▶▶: Fast reverse or forward search.

RES: Set output resolution of HDMI and Component Video output.

HOME: Display or exit HOME menu.

MARKER: Mark desired scene for selective playback.

SEARCH: Display or exit the search menu.

7 TITLE/POP-UP: Display DVD title menu or BD-ROM pop menu, if available.

MENU: Access menu on a DVD disc, if available.

8 ▲/▼/◀/▶: Select an item in a menu.
ENTER: Acknowledge menu selection.

9 DISP: Access on-screen display.
RTN: Exit from a menu window.

10 ▲: Opens and closes the disc tray.

■ : Stop playback.

⏸ : Pause playback temporarily.

◀◀/▶▶: Go to beginning of current/previous track, file or chapter; go to next track/file/chapter.

▶ : Start playback.

11 A,B,C,D: Navigate or select BD-ROM menu, if applicable; Page up/down PHOTO and MUSIC menu list.

You may operate the M56 from its front panel or via the M56 remote control. Since the remote control will be the primary controller for most cases, we will focus on remote-controlled operations. Be sure also to read the section, "IDENTIFICATION OF CONTROLS - FRONT PANEL."

USING THE HOME MENU

From the Home Menu screen, you can access the Setup menu as well as select desired media for playback. If the Home Menu does not appear, check your applicable video connections.

- 1 Press [HOME] and the Home Menu appears.



- 2 Use [◀/▶] keys to select among the following menu options - Movie, Photo, Music, My Media or Setup. If there is no disc loaded, only "Setup" and "My Media" are accessible from these Home Menu options.
- 3 Press [ENTER] to select menu option.

DISPLAY THE M56 SETUP MENU

The Setup Menu allows one to customize the operation of the M56. If the factory defaults do not suit your taste, you will need to use the setup menu to configure the M56 yourself.

Press the [HOME] button and then select "Setup" for the Setup Menu OSD to appear. With the use of the navigation buttons, you may select various menus.

NAVIGATING THE SETUP MENU OSD AND MAKING CHANGES

To navigate through the Setup Menu OSD options, please do the following using the M56 remote control:

- 1 Use [▲/▼] keys to move up or down the menu selections.
- 2 Press [◀/▶] to move backward or forward a menu window.
- 3 Use [▲/▼] keys to select through the options of a particular menu item.
- 4 Press [ENTER] to select a desired setting/selection.
- 5 Press [RTN] to exit the Setup menu.

DISPLAY DISC OSD


You can display the general disc playback status on the TV screen. Some items can be changed using the menu. To use the on-screen display

- 1 Press the M56 remote control's [DISP] during playback.
- 2 Press [▲/▼] to select an item. The selected item is highlighted.
- 3 Key-in the desired the number button, press [◀/▶] or [ENTER] as applicable.

NOTES

- The display feature may not be available for all disc media and is media dependent.
- Display disc OSD does not apply to audio only discs like CD and MP3/WMA files as they are already presented in their respective menu screens.
- If no button is pressed for about 15 seconds, the on-screen display disappears.

DISPLAY SETUP MENU

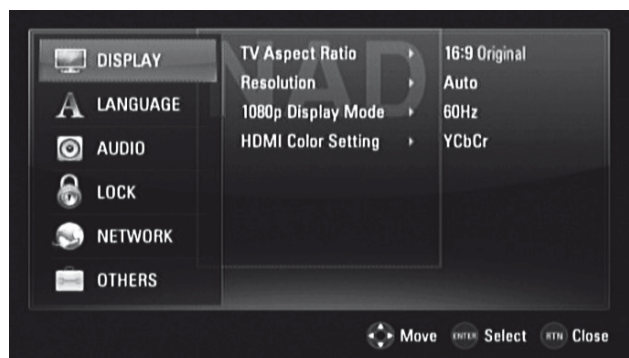

TV ASPECT RATIO

Set TV ASPECT RATIO to select a picture size matching the aspect ratio of your TV/Monitor.

Select "4:3 Letter Box" or "4:3 Pan Scan" when a standard 4:3 TV is connected.

4:3 Letter Box: Displays a wide picture with bands on the upper and lower portions of the screen.

4:3 Pan Scan: Automatically displays the wide picture on the entire screen and cuts off the portions that do not fit.

Select "16:9 Original" or "16:9 Full" when a 16:9 wide TV is connected.

16:9 Original: The 4:3 picture is displayed with an original 4:3 aspect ration, with black bars appearing at the left and right sides.

16:9 Full: The 4:3 pictures is adjusted horizontally (in a linear proportion) to fill the entire screen.

NOTE

"4:3 Letter Box" or "4:3 Pan Scan" are not selectable when the resolution is set to higher than 480i/480p (576i/576p).

OPERATION

USING THE M56

RESOLUTION

The M56 provides several video output resolutions for the HDMI OUT and COMPONENT VIDEO OUT jacks. Resolution can be changed via the "Resolution" option in the DISPLAY SETUP menu or by toggling the [RES] button of the M56 remote control. The M56 must be at STOP mode when M56 remote control's [RES] button is used to change the RESOLUTION setting.

The following resolutions are selectable or available

Auto: If the HDMI OUT jack is connected to a TV that provides display information, the M56 automatically selects the resolution best suited to the connected TV. If COMPONENT VIDEO OUT is the selected video output media, the resolution changes to "Auto" – the default resolution for Component Video OUT.

1080p: Outputs 1080 lines of progressive video (applicable only for HDMI connection).

1080i: Outputs 1080 lines of interlaced video.

720p: Outputs 720 lines of progressive video.

480p/576p: Outputs 480/576 lines progressive video.

480i/576i: Outputs 480/576 lines of interlaced video.

Available resolution varies according to connection and media format.

HDMI OUT CONNECTION

- For the 480i/576i resolution setting, the output resolution of HDMI OUT will change to 480p/576p.
- If you select a resolution manually and then connect the HDMI jack to TV and your TV does not accept it, the resolution setting will automatically be set to "Auto".
- The 1080p video output frame rate may be automatically set to either 24Hz or 50/60Hz depending upon the capability and preference of the connected TV and based on the native video frame rate of the BD-ROM disc's contents.
- If you select a resolution that is not compatible with your TV, a warning message as shown below will appear.



After resolution change, if you cannot see the screen, please wait for about 20 seconds and the resolution will automatically revert back to the previous resolution or a message screen as below may appear



Select "Yes" for the current resolution setting (the VFD will show the current resolution setting) to be applied. "Current" resolution setting is the suggested new resolution setting.

Select "No" to seek for the next applicable resolution setting. The above "Warning" screens will interchangeably be displayed until you select "Yes" to a suggested resolution setting.

COMPONENT VIDEO OUT CONNECTION

- For the 1080p resolution setting with unprotected media, the COMPONENT VIDEO OUT resolution will change to 1080i.
- When a protected media is loaded for playback, 720p, 1080i or 1080p resolution settings of COMPONENT VIDEO OUT will change to either 480i/576i or 480p/576p (depends upon the connectivity of a HDMI cable - plugged-in or unplugged).
- BD or DVD could prevent up-scaling on analog output.

VIDEO OUT CONNECTION

- The resolution of the VIDEO OUT jack is fixed to 480i/576i.

NOTES

- Depending on your display, some of the resolution settings may result to abnormal picture or the picture disappearing altogether. When this happens, press [HOME] key and then toggle [RES] repeatedly until the picture reappears.
- The M56 supports simultaneous output of all video out jacks. The resolution of the HDMI output will not be the same as the resolution on the Component Video output.
- For a list of applicable resolution settings with respect to video output port and type of media, please refer also to the "RESOLUTION SETTINGS" section of "REFERENCE TABLES" under the "REFERENCE" main heading.

1080P DISPLAY MODE

Movies shot with film camera consist of 24 frames per second. Since conventional televisions display frames either at 1/60 or 1/50 second intervals, the 24 frames do not appear at an even pace. The "24Hz" setting of the M56's "1080p Display Mode" option enables the faithful reproduction of such film-based materials, displaying each frame at 1/24 second intervals.

24Hz: Using an HDMI-equipped display compatible with 1080/24p input, set "1080p Display Mode" to "24Hz" for smooth presentation of film-based materials.

50/60Hz: If "24Hz" is selected and some picture disturbance is experienced when the video switches between video and film material, set "1080p Display Mode" to "50Hz" (European version model only) or "60Hz" (North America version model only) instead.

NOTE

If your TV is not compatible with 1080/24p, the actual frame frequency of the video output will be 50Hz (or 60Hz) even though the "1080p Display Mode" is set to "24Hz".

HDMI COLOR SETTING

Set the type of video output from HDMI OUT jack. Select the setting that matches your display device.

YCbCr: Select when connecting to an HDMI display device.

RGB: Select when connecting to a DVI device.

LANGUAGE SETUP MENU**DISPLAY MENU**

Select a language for the SETUP menu and on-screen display.

DISC MENU/AUDIO/SUBTITLE

Select the language you prefer for the audio track (disc audio), subtitles and the disc menu. Depending on the media, only those Disc Audio, Disc Subtitle and Disc Menu languages recorded on the media are available.

When a language is chosen, it will become the default setting unless the media overrides the settings.

Original: Refers to the original language in which the disc was recorded.


Other: Select "Other" if the desired language is not on the list. Use [▲/▼] to highlight "Other", press [ENTER] and then input the 4-digit language code using the number keys of the remote control. If you enter the wrong language code, complete entering the 4-digit numbers, press [ENTER] and then encode the correct 4-digit numbers. See "LANGUAGE CODE LIST" under the main heading "REFERENCE" for a list of applicable language codes.

Off: If you choose for the disc subtitle not to come up, select "Off".

OPERATION

USING THE M56

AUDIO SETUP MENU

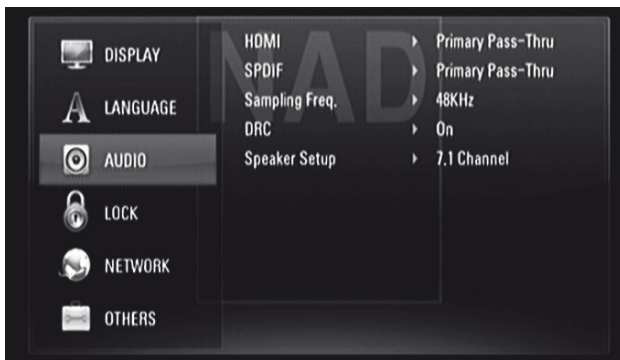

Each disc has a variety of audio output options. Set the M56's AUDIO options according to the type of audio system you use.

HDMI/SPDIF (DIGITAL AUDIO OUTPUT)

Select the audio output setting for HDMI OUT or DIGITAL AUDIO OUT port.

PCM Stereo: Select when connected to a two-channel digital stereo decoder.

PCM Multi-Ch (HDMI only): Select when connected to a device with multi-channel decoder. This is applicable to HDMI OUT only.

DTS Re-Encode: Select when connected to a device with DTS decoder.

Primary Pass-Thru: Select when connected to a device with LPCM, Dolby Digital, Dolby Digital Plus, Dolby TrueHD, DTS and DTS-HD decoder.

Refer also to the "AUDIO OUTPUT SPECIFICATIONS" section of "REFERENCE TABLES" under the "REFERENCE" main heading.

SAMPLE FREQ. (FREQUENCY)

Set the sampling frequency of the audio signal.

48KHz: If your receiver or amplifier is not capable of handling 96 kHz and 192 kHz signals, select 48 kHz. When this choice is made, this unit automatically converts any 96 kHz and 192 kHz signals to 48 kHz so your system can decode them.

96KHz: If your receiver or amplifier is not capable of handling 192 kHz signals, select 96 kHz. When this choice is made, this unit automatically converts any 192 kHz signal to 96 kHz so your system can decode them.

192KHz: If your receiver or amplifier is capable of handling 192 kHz signals, select 192 kHz. When this choice is made, a 192 kHz signal passes through without any further processing.

Check the documentation of your amplifier to verify its capabilities.

DRC (DYNAMIC RANGE CONTROL)

You can select the effective dynamic range (subjective range from soft to loud) for playback of Dolby Digital or Dolby Digital Plus soundtracks. It is useful when you watch your favorite action movie without disturbing others at night.

On: The "On" setting is for late-night sessions or other times when you wish to retain maximum dialog intelligibility while minimizing overall volume levels.

Off: To maintain full dynamic range, set to "Off".

NOTE

DRC setting can be changed only at STOP mode or when there is no disc loaded.

SPEAKER SETUP


Set the speaker size and sound level of your amplifier's connected speakers in order to obtain the best possible sound via the M56's 7.1 CH AUDIO OUTPUT.

2.1 Channel: Select if only the FRONT L, FRONT R and SUBW audio output are connected to your amplifier.

5.1 Channel: Select if only the FRONT L, FRONT R, CENTER, SURR L, SURR R and SW audio output are connected to your amplifier.

7.1 Channel: Select if all 7.1 CH AUDIO OUTPUT (FRONT L, FRONT R, CENTER, SURR L, SURR R, SURR BL, SURR BR and SUBW) are connected to your amplifier.

Upon selecting any of the above options, a sample Speaker Setup menu as below appears

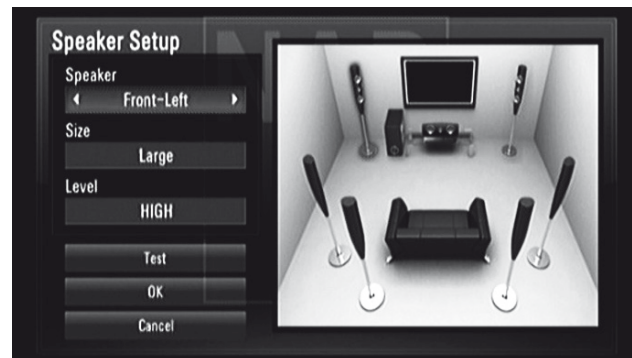

Speaker: Select a speaker to set up in the speaker field.

Size: Set up the speaker size of your amplifier's connected speakers – Large, Small or None.

Large: Select when your amplifier's connected speakers are capable of reproducing 100Hz or below.


Small: Select when your amplifier's connected speakers are not capable of reproducing 100Hz or below.

Level: Setup the volume levels of the individual speakers – HIGH, LOW or MIDDLE.

Test: Emit test tone from each speaker in sequence. If properly selected and set up, the absence of a test tone in a particular speaker connotes a connection or speaker setup problem.

OK: Select to confirm selected Speaker Setup settings.

Cancel: Select to cancel selected Speaker Setup settings.

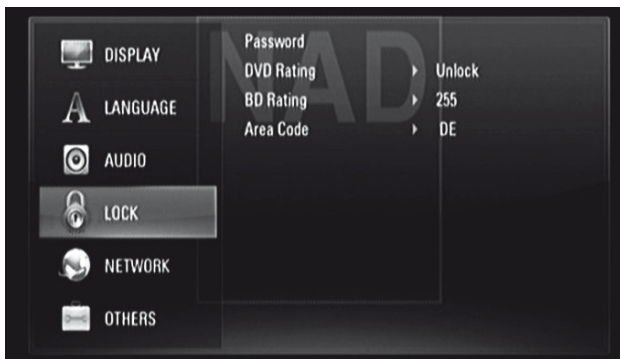LOCK SETUP MENU (APPLICABLE TO BD AND DVD PLAYBACK ONLY)

Some movies contain scenes that may not be suitable for children to view. Many of these discs contain parental control information that applies to the complete disc or to certain scenes on the disc. Movies and scenes are rated depending on the country. Some discs offer more suitable scenes as an alternative.

PASSWORD

When you access Lock Setup Menu for the first time, it is advised that you setup first your Password.

- 1 While at "Password" line menu, press [▶] to select "New" option.
- 2 Press [ENTER]. Input your desired 4-digit password code. Press [ENTER] again.
- 3 Enter again the 4-digit password code for verification.
- 4 Press [ENTER]. You have now setup your Parental Rating password.

You can change the password for parental control. Enter your four-digit password when prompted on the screen.

- 1 While at "Password" line menu, press [▶] to select "Change" option.
- 2 Press [ENTER].
- 3 Enter your old four-digit password using the numeric buttons (0-9). Press [ENTER].
- 4 You will be prompted to enter your new password. Enter the new four-digit password using the numeric buttons (0-9). Press [ENTER].
- 5 You will be prompted to verify your new password. Enter the new four-digit password again.
- 6 Press [ENTER]. The new four-digit password is now valid.

The setup Password can be deleted by the following procedure

- 1 While at "Password" line menu, press [▶] and then [▼] to select "Delete" option.
- 2 Press [ENTER].
- 3 Enter your four-digit password using the numeric buttons (0-9). Press [ENTER]. The password is now deleted.

DVD RATING

The parental rating feature allows you to block access to scenes greater than the rating you set up, thereby preventing your children from viewing material you believe is unsuitable. To activate "DVD Rating", please be guided by the following:

- 1 While at "DVD Rating" line menu, press [▶]. A "Password" prompt will come up in the menu screen.
- 2 Input the password you have setup.
- 3 Upon entering the password, you can now set the parental rating level you prefer. Use [▲/▼] to step through the rating levels.
- 4 Press [ENTER] to confirm your rating selection.

RATING 1-8

Rating "1" (Kids) has the most restrictions and Rating "8" (Adult) is the least restrictive.

UNLOCK

If you select "Unlock", parental lock is not active and the disc plays in full.

NOTE

If you set a rating level for the player, all disc scenes with the same rating level or lower are played. Higher rated scenes are not played unless an alternate scene is available on the disc. The alternative must have a lower rating. If no suitable alternative is found, playback stops. You must enter the 4-digit password in order to play the disc.

Should you forget your password, you can reset it by using the following steps.

- 1 Remove any disc loaded.
- 2 Select "Password" option.
- 3 Use the number button to enter "210499". "PINCLR" appears in the VFD and the password is reset.

BD RATING

Set an age limit for rated BD-ROM playback.

- 1 While at "BD Rating" line menu, press [▶]. A "Password" prompt will come up in the menu screen.
- 2 Input the password you have setup.
- 3 Upon entering the password, you can now set the age limit for BD viewing.
255: All BD ROM can be played back.
0 - 254: Prohibits playback according to the ratings recorded on the BD ROM.
- 4 Press [ENTER] to confirm your BD Age selection.

AREA CODE


Enter the code of the country/area whose standards were used to rate your DVD. See "AREA CODE LIST" under the main heading "REFERENCE" for a list of applicable area codes.

- 1 While at "Area Code" line menu, press [▶]. A "Password" prompt will come up in the menu screen.
- 2 Input the password you have setup. Press [ENTER].
- 3 Select desired "Area Code" using [▲/▼] buttons.
- 4 Press ENTER to confirm your area code selection.

OPERATION

USING THE M56

NETWORK SETUP MENU

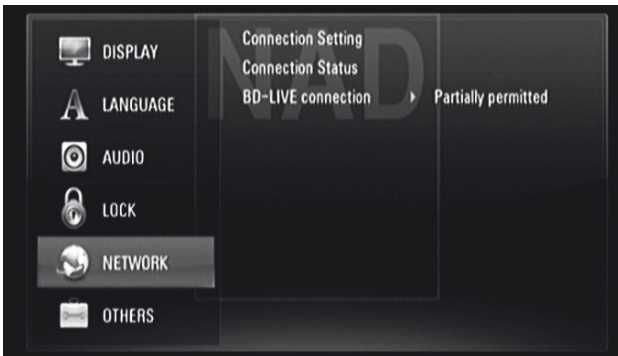

The NETWORK settings are needed to use the BD Live feature. By connecting the M56 to the internet, special BD-ROM sites can be enabled by some BD-ROM discs. Online contents can be downloaded and watched if a BD-ROM site contains links to future movie trailers, bonus contents and other related features.

Ensure proper broadband connectivity when configuring the following NETWORK features.

CONNECTION SETTING


Press [▶] or [ENTER] to setup your network connection. An OSD menu prompt allows you to select "Wired" or "Wireless".

Follow the below procedure in setting up your "Wired" or "Wireless" connection.


WIRED NETWORK

Selecting "Wired" network provides the best performance for your network connection. Wired connection allows attached devices direct connection to the network and thus not subject to radio frequency interference.

- 1 Select "Wired" from the "CONNECTION SETTING" menu.

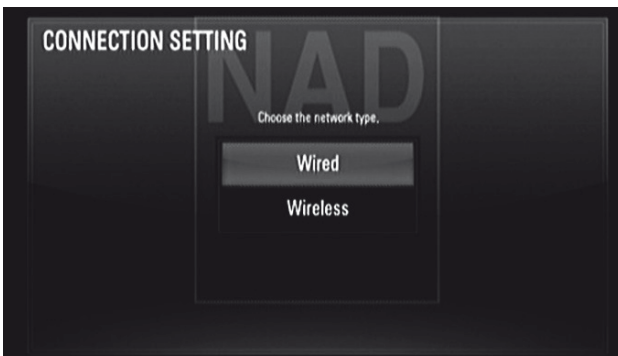


- 2 A menu prompts you to select "OK" to reset any existing connection or "No" to retain current connection. Select "OK". Use [▲/▼/◀/▶] to configure your connection with below OSD.

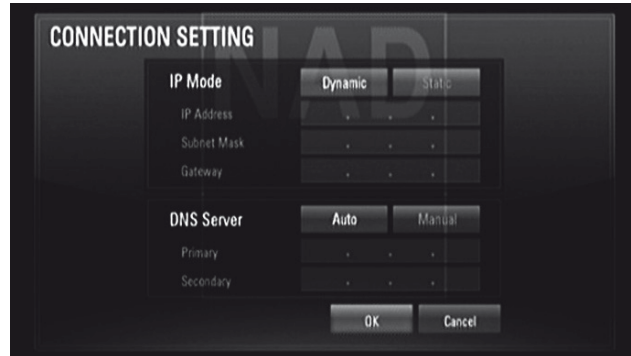


Static: Select to set manually the IP address, Subnet Mask, Gateway and consequently the DNS Server settings.

Dynamic: Select to automatically allocate an IP address.


- 3 After selecting either "Static" or "Dynamic", click "OK" to complete the network connection.
- 4 After setting up the connection, a menu will prompt you to test your network connection. Click "OK" to complete the network connection and exit the "CONNECTION SETTING" menu.

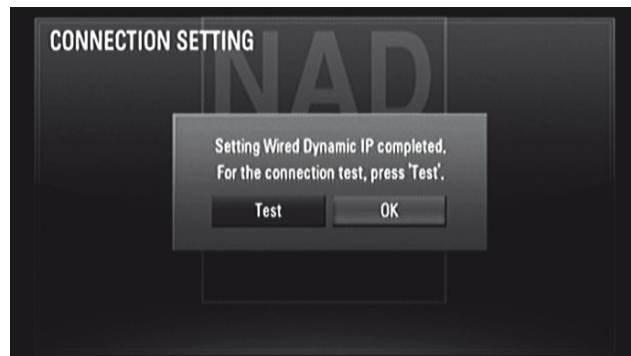

- 5 If "Test" is selected, the network connection status is displayed as below

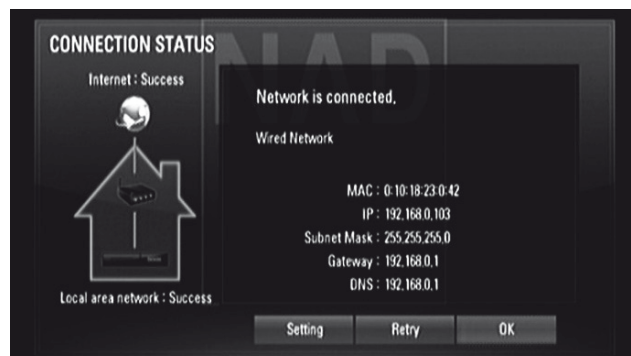


WIRELESS NETWORK

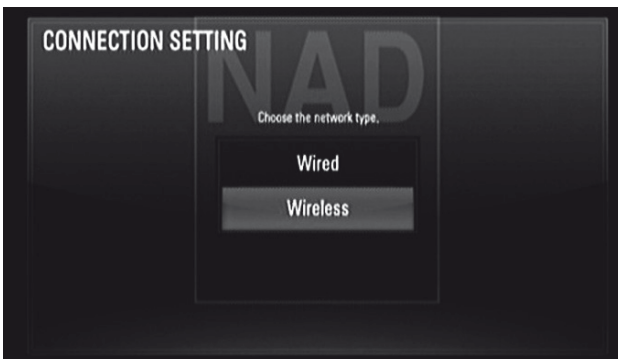

Another connection option is to use an Access Point or a wireless router. The network configuration and connection method may vary depending upon the equipment used and the network environment.

The M56 is equipped with an IEEE 802.11n wireless module, which also supports the 802.11b/g standard. For the best wireless performance, it is recommended that an IEEE 802.11n certified Wi-Fi network (access point or wireless router) is used. For detailed connection steps and network settings, refer to the setup instructions supplied with your access point or wireless router.

- 1 Select "Wireless" from the "CONNECTION SETTING" menu.
- 2 A menu prompts you to select "OK" to reset any existing connection or "No" to retain current connection. Select "OK". Use [▲/▼/◀/▶] to configure your connection with below OSD.

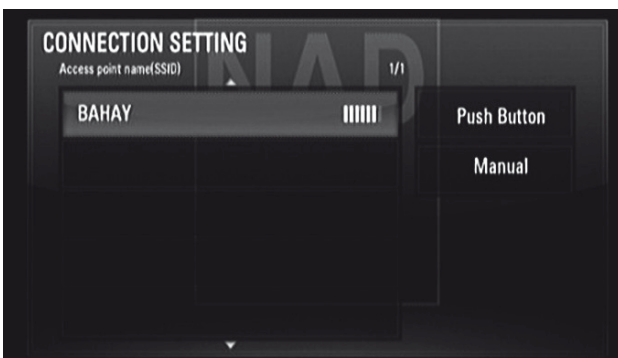

Push Button: Select if your access point or wireless router supports Push Button Configuration method. Within 2 minutes upon selecting "Push Button", press the Push Button on your access point or wireless router. You do not need to know the AP name (SSID) and security code of your access point or wireless router.

Manual: The AP name (SSID) of your access point may not be broadcasting. Check your router settings through your computer and either set your router to broadcast SSID, or manually enter the AP name (SSID). Follow the consequent OSD prompt sequence and enter the necessary information or configurations.

- 3 Follow the same steps 2-5 of the above WIRED NETWORK procedure to complete your wireless network connection settings.

CONNECTION STATUS

Selecting "Connection Status" will test and consequently display the status of your network connection. The status of your network connection will be displayed like "Success" (as in above OSD) or "Fail".

NOTES ON NETWORK CONNECTION

- *NAD is not responsible for any malfunction of the M56 and/or the internet connection feature due to communication errors/malfunctions associated with your broadband internet connection or other connected equipment.*
- *NAD is not responsible for the functionality or continued availability of the features of BD-ROM discs made available through the Internet Connection. Some disc related material available by the Internet Connection may not be compatible with the M56. If you have questions about such content, please contact the producer of the disc.*
- *Any fees charged by an ISP including, without limitation, connection charges are your responsibility.*
- *A 10 Base-T or 100 Base-TX LAN port is required for wired connection to the M56. If your internet service does not allow for such a connection, you will not be able to connect the M56.*
- *The wireless network operates at 2.4GHz radio frequency and maybe affected by interference from other household devices such as cordless telephone, Bluetooth devices and microwave oven that maybe using the same frequency.*
- *IEEE 802.11n is not applicable to M56's Russian version model.*
- *Set your access point or wireless router to infrastructure mode. Ad-hoc mode is not supported*

BD-LIVE CONNECTION

You can restrict Internet access when BD-Live functions are used.

Permitted: Internet access is permitted for all BD-Live contents.

Partially permitted: Internet access is permitted only for BD-Live contents that have content owner certificates. Internet access and AACS Online functions are prohibited for all BD-Live contents without a certificate.

Advanced Access Content System (AACS) is a standard for content distribution and digital rights management, intended to restrict access to and copying of the next generation of optical discs and DVDs. The AACS standard has been adopted as the access restriction scheme for Blu-ray Disc.

Prohibited: Internet access is prohibited for all BD-Live contents.

OPERATION

USING THE M56

OTHERS SETUP MENU



SKIN

Change the background or wallpaper of the OSD. The default "Skin" is "Skin 1" which is actually the NAD logo.

BD STORAGE SELECT

The M56 can store some BD-ROM disc related information, including downloaded on-line content such as movie trailers and special features into the internal Flash Memory or an USB device.

Built-In Storage: Store the downloaded Blu-ray disc content on the internal flash memory.

USB Storage: Store the downloaded Blu-ray disc content on the connected USB device.

BD STORAGE CLEAR

The BD contents from the internal flash memory or the connected USB device are cleared.

Built-In Storage: Delete all the downloaded contents from the built-in storage.

USB Storage: Delete all the downloaded contents from the connected USB storage.

DIVX VOD

DivX is the name of a revolutionary new video codec which is based on the new MPEG-4 compression standard for video. You will be able to play DivX discs using the M56.

DivX Reg. Code: The registration code of your M56 is displayed.

Deactivate: The M56 is deactivated and the deactivation code is displayed.

NOTE

Only downloaded videos from DivX VOD can be played back on your M56.

FACTORY SET

Reset the M56 to its original factory settings.

Yes: Select to restore the M56 to its factory settings.

No: Select to retain current settings.

USB MODE

The M56 can play back MP3/WMA/JPEG/PNG/DivX files stored in external USB (Universal Serial bus) devices. The following are the M56's capabilities with respect to USB device playability.

- Support USB Flash Drive and External HDD formatted in FAT16, FAT32 or NTFS.
- Support USB 1.1 and USB 2.0.
- Support up to 4 partitions of the USB device.
- Digital camera and mobile phone are not supported.
- If a USB extension cable or USB HUB is used, the USB device may not be recognized.

NOTE


External HDD formatted in NTFS is read only; thus, it cannot be used for downloading BD-Live contents.

IMPORTANT NOTICE

USB port of the M56 cannot be connected to a PC.

USB PLAYBACK

- 1 Connect the external USB device to the front panel's USB input.
- 2 Press [HOME]. Select "Movie", "Photo" or "Music" option. Press [ENTER].
- 3 If a disc is loaded and a USB device is inserted simultaneously, the menu prompt for selecting a media will appear

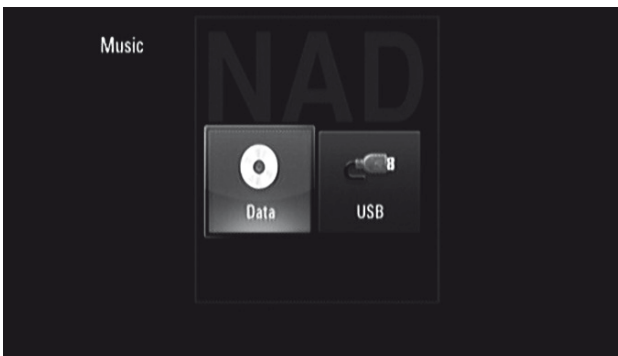

- 4 Select "USB" as the desired media and then press [ENTER].

For details of operations on applicable file type, refer to the relevant sections below about MP3/WMA/Photo/DivX playback.

PLAYING AUDIO CD/MP3/WMA



The M56 can play Audio CD and MP3/WMA formatted recordings on CD-R/RW, DVD±R/RW, BD-R/RE discs or USB flash drive.

- 1 Load the applicable disc or connect USB containing files. Select "Music" from the "Home" menu.
- 2 Press [ENTER]. The "MUSIC" menu appears at the OSD. A list of folders, tracks or files is shown at the OSD.
- 3 Use the M56 remote control's [◀/▶] keys to navigate through the folders, tracks or files.
- 4 Press ENTER to see the folder contents.
- 5 Press [◀/▶] to select a track or file.
- 6 Press [▶] or [ENTER] to start playback.

NOTES

- Playback may start automatically if an Audio CD is loaded.
- If you are in a file list and want to return to the previous Folder list, use the [▲/▼] buttons on the remote to highlight the folder and press [ENTER].
- Use M56 remote control's red (A), green (B), yellow (C) or blue (D) buttons as indicated in the OSD – go to the first file/page, move up or down the file/page list or jump to last file/page.
- During playback, press [RTN] once or twice to go back to the previous menu/page/OSD.

IMPORTANT NOTICES

- Customers should note that permission is required in order to download MP3/WMA files and music from the Internet. NAD ELECTRONICS INTERNATIONAL has no right to grant such permission. Permission should always be sought from the copyright owner.
- Maximum files per disc/USB: less than 2000 (total number of files and folders).

OPERATION

USING THE M56 - FEATURES

VIEWING A PHOTO FILE



The M56 allows the playback or viewing of PHOTO files.

- 1 Load the applicable disc or connect USB containing files. Select "Photo" from the "Home" menu. Press [ENTER].
- 2 The PHOTO menu appears on the TV screen. A thumbnail of the photos loaded in the disc will be shown in the OSD.
- 3 Press [▲/▼/◀/▶] to go over the photo files.
- 4 Press [ENTER] or [▶] to select a file and start playback.
- 5 During photo playback, several selectable options are shown in the bottom portion of the photo. Use [◀/▶] to highlight and select any of the following options.

Slide Show: Press [ENTER] button to start or pause the slide show.

Music: Press [ENTER] to play or pause the background music. This option is available after the background music is selected using "Music Select" option.

Music Select: Select the background music during photo playback. Press [ENTER] and the "Select the music album" submenu appears. Use [▲/▼/◀/▶] to select a media or folder containing music files. Press ENTER to confirm your selection and start playback of selected background music.

Rotate: Toggle [ENTER] to continually rotate the picture clockwise. This option is not available during slide show.

Zoom: During playback or pause mode, press [ZOOM] to display the [Zoom] menu. Use M56 remote control's green or yellow buttons to zoom in or out of the picture. You can move through the zoomed picture using [▲/▼/◀/▶] buttons. Press RTN to exit the [Zoom] menu and return to the normal picture size. The zoom function can also be operated by M56 remote control's [ZOOM] button.

Setting: Use [▲/▼] to select "Effect" or "Delay". Use [▲/▼/◀/▶] and then press ENTER to set the selected option.

Effect: Apply various effects when sliding photos.

Off: Slide Show without any effect.

Random: Slide show effects are applied randomly.

Slide: Slides a photo from various directions.

Door: Photo will appear like door opening.

Lattice: Photo will appear from tiled pieces to full screen image.

Delay: Set the photo delay time for Slide Show. Use M56 remote control's [◀/▶] to select Slow, Normal or Fast.

Hide: Toggle [ENTER] to exit or display the menu options.

NOTES

- If you are in a file list and want to return to the previous Folder list, use the [▲/▼] buttons on the remote to highlight the folder and press [ENTER].
- Use M56 remote control's red (A), green (B), yellow (C) or blue (D) buttons as indicated in the OSD – go to the first file/page, move up or down the file/page list or jump to last file/page.
- During playback, press [RTN] once or twice to go back to the previous menu/page/OSD.
- Recommended size: less than 4000 x 3000 x 24 bit/pixel or less than 3000 x 3000 x 32 bit/pixel.
- Maximum files per disc/USB: less than 2000 (total number of files and folders).

DIVX PLAYBACK

The M56 supports DivX playback.

- 1 Load the applicable disc or connect USB containing files. Select "MOVIE" from the "Home" menu.
- 2 Press [ENTER]. A list of DivX files is shown in the OSD.
- 3 Press [▲/▼/◀/▶] and then [ENTER] to select a file and start playback.

NOTE

Use M56 remote control's red (A), green (B), yellow (C) or blue (D) buttons as indicated in the OSD – go to the first file/page, move up or down the file/page list or jump to last file/page.

MOVIE FILE REQUIREMENTS

Movie file compatibility with the M56 is limited as follows:

- 1 Available resolution size: 1920 x 1080 (W x H) pixels
- 2 File extensions: ".avi", ".divx", ".mpg", ".mpeg", ".mp4", ".mkv"
- 3 Playable subtitle: SubRip (.srt / .txt), SAMI (.smi), SubStation Alpha (.ssa/.txt), MicroDVD (.sub/.txt), VobSub (.sub), SubViewer 1.0 (.sub), SubViewer 2.0 (.sub/.txt), TMLayer (.txt), DVD Subtitle System (.txt)
- 4 Playable Codec format: "DIVX3.xx", "DIVX4.xx", "DIVX5.xx", "XVID", "DIVX6.xx" (Standard playback only), H.264/MPEG-4 AVC, DIVX-HD, MPEG1 SS, MPEG2 PS, MPEG2 TS
- 5 Playable Audio format: "Dolby Digital", "DTS", "MP3", "WMA", "AAC", "AC3"
- 6 Sampling frequency: within 32-48 kHz (WMA), within 16-48 kHz (MP3)
- 7 Bit rate: within 20-320 kbps (WMA), within 32-320 kbps (MP3)
- 8 CD-R/RW, DVD±R/RW, BD-R/RE Format: ISO 9660+JOLIET, UDF and UDF Bridge format
- 9 Maximum Files/Folder: Less than 2000
 - The movie file name and subtitle are limited to 180 characters.
 - Not all the WMA and AAC Audio format is compatible with this unit.
 - HD movie files contained on the CD or USB 1.0/1.1 may not be played properly. BD, DVD or USB 2.0 are recommended to play back HD movie files.
 - This player support H.264/MPEG-4 AVC profile Main, High at Level 4.1.
 - For a file with higher level, a warning message will appear on the screen.
 - This player does not support files that are recorded with GMC (Global Motion Compensation) or Qpel (Quarter pixel). Video encoding techniques in MPEG4 standard, like DivX or XVID, are supported.

USING "MY MEDIA" FEATURES

The M56 can browse and play movies, music and photo stored on DLNA Certified media servers connected on your home network.

- 1 Check your network connection and settings. Refer to the section about NETWORK SETUP MENU under the USING THE M56 segment of the main OPERATION heading.
- 2 Press [HOME]. Use [◀/▶] to select "My Media" option. Press [ENTER].
- 3 The M56 will scan and display up to 32 servers. Use [▲/▼] to select a server from the list. Press [ENTER].
- 4 Use [▲/▼/◀/▶] to select a content from the list. Press [▶] to begin playback of the selected content.
- 5 Press [SEARCH] to return to the server list menu.

ABOUT DLNA

The M56 is a DLNA Certified digital media player that can display and play movie, photo and music content from your DLNA Certified network device and DLNA server. The Digital Living Network Alliance (DLNA) is a cross-industry organization of consumer electronics, computing industry and mobile device companies. Digital Living provides consumers with easy sharing of digital media through a wired or wireless network in the home.

The M56 complies with DLNA Interoperability Guidelines v1.5. When a PC running DLNA server software or other DLNA compatible device is connected to the M56, some setting changes of software or other devices may be required. Please refer to the operating instructions for the software or device for more information.

INSTALLING NERO MEDIAHOME 4 ESSENTIALS

The M56 comes supplied with a Nero MediaHome 4 Essentials CD-ROM. Nero MediaHome 4 Essentials is a software for sharing movie, music and photo files stored on your computer to the M56. Before installing the Nero MediaHome 4 Essentials, check the system requirements shown below.

- Windows XP (Service Pack 2 or higher), Windows Vista (no Service Pack required), Windows XP Media Center Edition 2005 (Service Pack 2 or higher), Windows Server 2003
- Windows Vista 64-bit edition (application runs in 32-bit mode)
- Hard drive space: 200 MB hard drive space for a typical installation of Nero MediaHome stand-alone
- 1.2 GHz Intel Pentium III or AMD Sempron™2200+ processors
- Memory: 256 MB RAM
- Graphics card with at least 32 MB video memory, minimum resolution of 800 x 600 pixels, and 16-bit color settings
- Windows Internet Explorer 6.0 or higher
- DirectX 9.0c revision 30 (August 2006) or higher
- Network environment: 100 Mb Ethernet, WLAN (IEEE 802.11b/g/n)

The following is the procedure for installing the Nero MediaHome 4 Essentials. An installation wizard will walk you through the quick and uncomplicated installation process.

- 1 Close all Microsoft Windows programs and exit any anti-virus software that may be running.
- 2 Insert the Nero MediaHome 4 Essentials CD-ROM into your computer's CD-ROM drive.
- 3 Click "Nero MediaHome 4 Essentials". The installation is prepared and the installation wizard appears.
- 4 Click "Next" to display the serial number input screen. Click "Next" to proceed to the next step.
- 5 If you accept all conditions, click "I accept the License Conditions" check box. Click "Next". Installation is not possible without this agreement.
- 6 Click "Typical" and click "Next". The installation process starts.
- 7 If you want to take part in the anonymous collection of data, select the check box and click the "Next" button.
- 8 Click the "Exit" button to complete the installation.

SHARING FILES AND FOLDERS

On your computer, you must share the folder that contained the movie, music and/or photo content that you intend to play back using the "My Media" feature. Below is the procedure for selecting the shared folders on your computer.

- 1 Double-click the "Nero MediaHome 4 Essentials" icon on the desktop.
- 2 Click "Network" icon on the left and define your network name in the "Network name" field. The Network name you enter will be recognized by your player.
- 3 Click "Shares" icon on the left.
- 4 Click "Local Folders" tab on the "Shared" screen. Click "Add" icon to open the "Browse Folder" window.
- 5 Select the folder containing the files you want to share. The selected folder is added to the list of shared folders.
- 6 Click "Start Server" icon to start the server.

NOTES

- *If the shared folders or files are not displayed on the player, click the folder on the "Local Folders" tab and click "Rescan Folder" at the "More" button.*
- *Visit www.nero.com for more information and software tools.*

PLAYBACK OF SHARED CONTENTS

The M56 can display and play movie, photo and music content stored on your computer or other DLNA media server.

- 1 Start the server on your computer or other device connected to your home network.
- 2 Press HOME. The "Home Menu" appears on the screen.
- 3 Use [◀/▶] to select "My Media". Press ENTER. The server list appears on the screen.
- 4 Use [▲/▼] to select a server from the list. Press [ENTER]. The shared folders from the server are displayed.
- 5 Use [▲/▼/◀/▶] to navigate the shared contents list and select the content you want to playback. On the [My Media] menu, use red or blue button to move to the first or last file/folder and green or yellow button to move to the previous or next page.
- 6 Press [▶] or [ENTER] to start playback of the selected content.


OPERATION

USING THE M56 - FEATURES

FILE REQUIREMENTS

- File extensions: ".jpg", ".jpeg", ".png", ".avi", ".divx", ".mpg", ".mpeg", ".mp3", ".mkv", ".mp4", ".wma", ".pcm" (LPCM)
- Maximum Files/Folder: Less than 2000 (total number of files and folders)
- Music Files
 - Sampling frequency: within 8 - 48kHz (WMA), within 11 - 48kHz (MP3), 44.1 and 48kHz (LPCM)
 - Bit rate: within 8 - 320kbps (WMA, MP3), 768kbps and 1.536Mbps (LPCM)
- Photo files
 - Recommended photo size: Less than 4,000 x 3,000 x 24bit/pixel/Less than 3,000 x 3,000 x 32bit/pixel
- Movie files
 - Available resolution size: 1920 x 1080 (W x H) pixels
 - Playable subtitle: .SubRip (.srt / .txt), SAMI (.smi), SubStation Alpha (.ssa/.txt), MicroDVD (.sub/.txt), SubViewer 1.0 (.sub), SubViewer 2.0 (.sub/.txt), TMLayer (.txt), DVD Subtitle System (.txt)
 - Viewing internal subtitle is not available for mkv/mp4 file playback.
 - The subtitle files are not displayed on the "My Media" menu.
 - Playable Codec format: DIVX3.xx, DIVX4.xx, DIVX5.xx, XVID, DIVX6.xx (Standard playback only), DIVX-HD, MPEG1 SS, MPEG2PS, MPEG2 TS, H.264/MPEG-4 AVC
 - Audio format: Dolby Digital, DTS, MP3, WMA, AAC, AC3
 - Sampling frequency: within 32 - 48kHz (WMA), within 16 - 48kHz (MP3)
 - Bit rate: within 20 - 320kbps (WMA), within 32 - 320kbps (MP3)
 - The movie file and subtitle names are limited to 128 characters.
 - Not all the WMA and AAC Audio format is compatible with this unit.
 - This player does not support files that are recorded with GMC (Global Motion Compensation) or Qpel (Quarter pixel). Video encoding techniques in MPEG4 standard, like DivX or XVID, are supported.
 - The M56 supports H.264/MPEG-4 AVC profile Main, High at Level 4.1. For a file with higher level, a warning message will appear on the screen.

ADJUSTING THE PICTURE MODE

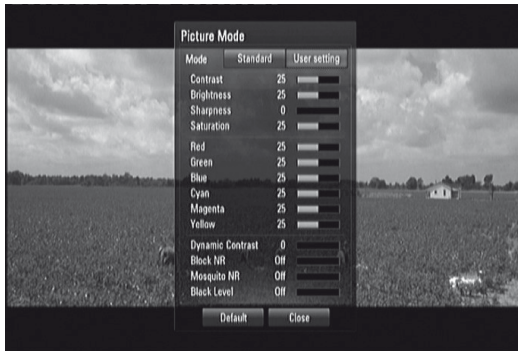

Select the video quality mode during playback. You can adjust various options such as Contrast, Brightness, Sharpness, etc.

- Press M56 remote control's [PICTURE] button while playing a BD, DVD or a movie file. The [Picture Mode] menu appears on the screen.
- Use [◀/▶] to select between "Standard" and "User Setting" options.

Standard: Disable video color setting options.
User Settings: Enable video color setting options.
- Use [▲/▼] to select a desired option. Upon selection, only the selected option will remain shown in the OSD. Use [◀/▶] to adjust the value.
- Use [▲/▼] again to move on to the next video color option or press [ENTER] to display again all options.
- Press [RTN] or [PICTURE] to complete all settings and exit Picture Mode menu.
- Select "Default" to restore Picture Mode default settings. Select "Close" to accept all changes done and at the same time exit Picture Mode menu.

The following filter settings can be adjusted even if the picture mode is in "Standard" mode. These settings can be used to reduce the noise level or set the black level of the video image on the screen.

Block NR (Block Noise Reduction): Set this option to "Low", "Mid" or "High" to reduce the block noise produced in the MPEG compression process which may appear especially on fast-moving pictures. Select "Off" to retain current settings.

Mosquito NR (Mosquito Noise Reduction): Reduce mosquito (scattering) noise produced in the MPEG compression process by selecting "Low", "Mid" or "High" option. Select "Off" to retain current settings.

Black Level: Black level determines the amount of light a picture display emits for the darkest areas of an image. Select "On" to display deeper, richer black than in "Off" setting. Black Level control is only valid in composite output.

ENJOYING BD-LIVE™ OR BONUSVIEW™ IN BD-VIDEO

The M56 supports picture-in-picture (PIP), secondary audio, Virtual packages and other features for BD-Video supporting BONUSVIEW (BD-ROM version 2 Profile 1 version 1.1/ Final Standard Profile). In addition to the BONUSVIEW function, BD-Video supporting BD-Live (BD-ROM version 2 Profile 2) allow more functions like online games by connecting the M56 to the internet.

ENJOYING BD-LIVE DISCS

The M56 supports BD-Live, a new BD-Video function that allows access features like interactive functions when connected to the internet. The usable functions and the operating method may vary with each disc so make sure to refer to the disc's instructions for proper access and playability.

The M56 must be connected to the internet to use the BD-Live functions. It may take up to several minutes to load and start enjoying BD-Live contents. Additional contents like movie trailer, subtitles, BD-J and similar features can be downloaded to the internal flash memory or to a USB device connected to the front panel USB input port. Make sure that the free space in the USB device is more than 1GB.

SCREENSAVER

The screensaver appears when you leave the M56 in Stop mode or HOME menu mode for about five minutes. If the Screen Saver is displayed for five minutes, the M56 automatically turns itself off.

LAST SCENE MEMORY


The M56 memorizes the last scene from the last disc that is viewed. The last scene remains in memory even if the disc is removed from the unit or the unit turned off. If you load a disc that has the scene memorized, the scene is automatically recalled.

NOTES

- The M56 does not memorize the scene of a disc if it is turned off before the disc is played back.*
- Last Scene Memory function for a previous disc is erased once a different disc is played.*
- This function may not work on some discs or titles.*

Depending on the media, the following basic function controls of the M56 can be accessed directly using the M56 remote control.

AUDIO

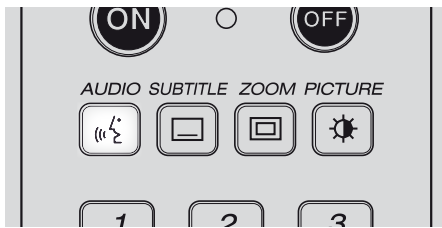

The AUDIO button will allow one to switch the audio language or format only if the media supports the AUDIO button feature.

Press [AUDIO] repeatedly to select desired audio language or format.

SUBTITLE



It is possible to change the subtitle language to a different language from the one selected at the initial settings. This operation works only with discs on which multiple subtitle languages are recorded.

- 1 Press [SUBTITLE] during playback. When no subtitles are recorded, "OFF" will be displayed.
- 2 Press [SUBTITLE] repeatedly until the desired language is selected.

When the desired language is not selected even after pressing the button several times, it means that the language is not available on the disc.

To eliminate the On Screen Subtitles, press [SUBTITLE] repeatedly to select "OFF".

ZOOM




Use [ZOOM] to enlarge the video image. Press [ZOOM] during playback or still playback to activate the Zoom function.

Use the green and yellow buttons to select Zoom mode (up to 16 levels). Move through the zoomed picture using the [▲/▼/◀/▶] buttons. To return to normal picture size, press the yellow (C) button repeatedly until the picture returns to its normal size (Zoom).

NOTE

Zoom may not work on some discs or titles.

PICTURE

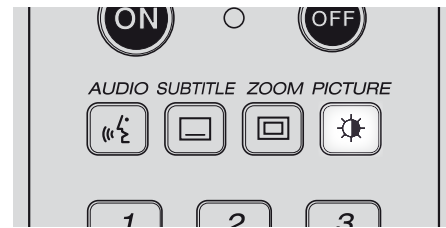

Press to go to PICTURE MODE menu wherein video color setting options can be enabled, adjusted, disabled or turned off. Refer also to the item about ADJUSTING THE PICTURE MODE under the USING THE M56 – FEATURES segment of the main OPERATION heading.

RPT (REPEAT)



Press [RPT] repeatedly to select desired repeat mode. The following are the repeat modes

- 🔄 **Track:** Repeated playback of current track or file.
- 🔄 **All:** Repeated playback of all tracks, files and folders.
- 🔀 **(audio disc/file only):** Tracks or files are played back in random order.
- 🔀 **All:** Repeated playback of all tracks, files and folders in random order.
- 📄 **Chapter:** Repeated playback movie chapter.
- 📄 **Title:** Repeated playback of movie title.
- 📄 **A-B (video disc/file, audio CD only):** Repeat specific portion of a scene. Press [RPT] to select beginning of the portion - "A-". Press [ENTER] to select the end of the portion - "A-B". A scene portion less than 3 seconds cannot be selected.
- Off:** Repeated press [RPT] until "Off" to cancel all repeat modes.


NOTES

- *For other disc type, the repeat mode may not be possible as above. The repeat mode of such discs maybe enabled from the disc's menu itself or other built-in features.*
- *REPEAT feature does not apply to PHOTO files.*

OPERATION

USING THE M56 – FUNCTION CONTROL

MARKER, SEARCH, CLEAR

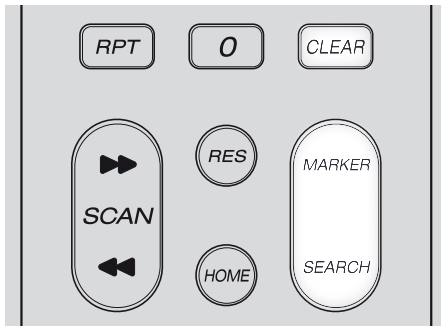

Use the [MARKER] button to selectively mark a scene that you wish to playback.

ENTER A MARKER

Press [MARKER] at the desired point on the disc. The marker icon appears on the screen briefly. You can enter up to nine markers.

RECALL OR CLEAR A MARKER SCENE

Press [SEARCH] and the search menu appears on the screen. Press a number button to select a marker number that you want to recall. Playback starts from the marked scene.

Alternatively, press [▼] to highlight a marker number. Use [◀/▶] to select a marked scene you want to recall or clear. Press [ENTER] and playback starts from the marked scene. Press [CLEAR] and the marked scene is erased from the search menu.

NOTES

- This MARKER feature is applicable only to video discs/files.
- This function may not work on some discs or titles.
- All marked points are cleared if the title is in complete STOP mode, title is changed or the disc is unloaded.

RESOLUTION SETTINGS

PLAYBACK OF UNPROTECTED MEDIA

VIDEO OUTPUT				
RESOLUTION	HDMI OUT	COMPONENT VIDEO OUT		VIDEO OUT
		HDMI CONNECTED	HDMI DISCONNECTED	
480i/576i	480p/576p	480i/576i	480i/576i	480i/576i
480p/576p	480p/576p	480p/576p	480p/576p	480i/576i
720p	720p	720p	720p	480i/576i
1080i	1080i	1080i	1080i	480i/576i
1080p/24Hz mode	1080p/24Hz mode	480i/576i	1080i	480i/576i
1080p/50Hz/60Hz	1080p/50Hz/60Hz	480i/576i	1080i	480i/576i

PLAYBACK OF COPY PROTECTED MEDIA

VIDEO OUTPUT				
RESOLUTION	HDMI OUT	COMPONENT VIDEO OUT		VIDEO OUT
		HDMI CONNECTED	HDMI DISCONNECTED	
480i/576i	480p/576p	480i/576i	480i/576i	480i/576i
480p/576p	480p/576p	480p/576p	480p/576p	480i/576i
720p	720p	480i/576i	480p/576p	480i/576i
1080i	1080i	480i/576i	480p/576p	480i/576i
1080p/24Hz mode	1080p/24Hz mode	480i/576i	480p/576p	480i/576i
1080p/50Hz/60Hz	1080p/50Hz/60Hz	480i/576i	480p/576p	480i/576i

AUDIO OUTPUT SPECIFICATIONS

SOURCE	AUDIO OUTPUT PORT								
	ANALOG 7.1 CH OUTPUT	SPDIF (DIGITAL AUDIO OUT)			HDMI OUT				
		AUDIO OUTPUT SETTING				AUDIO OUTPUT SETTING			
		PCM STEREO	DTS RE-ENCODE	PRIMARY PASS-THRU	PCM STEREO	PCM MULTI-CH	DTS RE-ENCODE	PRIMARY PASS-THRU	
Dolby Digital	PCM 5.1ch	PCM 2ch	DTS	Dolby Digital	PCM 2ch	PCM 5.1ch	DTS	Dolby Digital	
Dolby Digital Plus	PCM 7.1ch	PCM 2ch	DTS	Dolby Digital	PCM 2ch	PCM 7.1ch	DTS	Dolby Digital Plus	
Dolby TrueHD	PCM 7.1ch	PCM 2ch	DTS	Dolby Digital	PCM 2ch	PCM 7.1ch	DTS	Dolby TrueHD	
DTS	PCM 5.1ch	PCM 2ch	DTS	DTS	PCM 2ch	PCM 5.1ch	DTS	DTS	
DTS-HD	PCM 7.1ch	PCM 2ch	DTS	DTS	PCM 2ch	PCM 7.1ch	DTS	DTS-HD	
Linear PCM 2ch	PCM 2ch	PCM 2ch	DTS	PCM 2ch	PCM 2ch	PCM 2ch	DTS	PCM 2ch	
Linear PCM 5.1ch	PCM 5.1ch	PCM 2ch	DTS	PCM 2ch	PCM 2ch	PCM 5.1ch	DTS	PCM 5.1ch	
Linear PCM 7.1ch	PCM 7.1ch	PCM 2ch	DTS	PCM 2ch	PCM 2ch	PCM 7.1ch	DTS	PCM 7.1ch	

NOTES

- It is not possible to set up at the same time "PCM Multi-Ch" or "Primary Pass-Thru" setting for "HDMI" option and "DTS Re-Encode" setting for "SPDIF" option. If the "HDMI" option is set to "PCM Multi-Ch" or "Primary Pass-Thru", the "SPDIF" option is set automatically to "PCM Stereo". Conversely, if "SPDIF" option is set to "DTS Re-Encode", the "HDMI" option is set automatically to "PCM Stereo".
- If the M56 plays back a disc of Dolby Digital Plus or Dolby TrueHD audio format and "HDMI" option set to "PCM Multi-Ch" and "SPDIF" option set to "Primary Pass-Thru", SPDIF output is limited to "PCM 2ch" only.
- If the M56 plays back a disc of Dolby Digital Plus or Dolby TrueHD audio format, HDMI connection is 1.3 version and audio output is taken from HDMI OUT port with both HDMI and SPDIF connected simultaneously, SPDIF output is limited to "PCM 2ch" only.
- The audio output format for MP3/WMA playback is PCM 48kHz/16 bit and PCM 44.1kHz/16 bit for Audio CD.
- Audio output at Analog audio OUT port is always PCM 2ch.

REFERENCE

LANGUAGE CODE LIST

Use this list to input your desired language for the following settings: DISC AUDIO/DISC SUBTITLE/DISC MENU language.

Language	Code	Language	Code	Language	Code	Language	Code
Abkhazian	6566	Fiji	7074	Lingala	7678	Sinhalese	8373
Afar	6565	Finnish	7073	Lithuanian	7684	Slovak	8375
Afrikaans	6570	French	7082	Macedonian	7775	Slovenian	8376
Albanian	8381	Frisian	7089	Malagasy	7771	Somali	8379
Ameharic	6577	Galician	7176	Malay	7783	Spanish	6983
Arabic	6582	Georgian	7565	Malayalam	7776	Sudanese	8385
Armenian	7289	German	6869	Maltese	7784	Swahili	8387
Assamese	6583	Greek	6976	Maori	7773	Swedish	8386
Aymara	6588	Greenlandic	7576	Marathi	7782	Tagalog	8476
Azerbaijani	6590	Guarani	7178	Moldavian	7779	Tajik	8471
Bashkir	6665	Gujarati	7185	Mongolian	7778	Tamil	8465
Basque	6985	Hausa	7265	Nauru	7865	Tatar	8484
Bengali; Bangla	6678	Hebrew	7387	Nepali	7869	Telugu	8469
Bhutani	6890	Hindi	7273	Norwegian	7879	Thai	8472
Bihari	6672	Hungarian	7285	Oriya	7982	Tibetan	6679
Breton	6682	Icelandic	7383	Panjabi	8065	Tigrinya	8473
Bulgarian	6671	Indonesian	7378	Pashto, Pushto	8083	Tonga	8479
Burmese	7789	Interlingua	7365	Persian	7065	Turkish	8482
Byelorussian	6669	Irish	7165	Polish	8076	Turkmen	8475
Cambodian	7577	Italian	7384	Portuguese	8084	Twi	8487
Catalan	6765	Japanese	7465	Quechua	8185	Ukrainian	8575
Chinese	9072	Javanese	7487	Rhaeto-Romance	8277	Urdu	8582
Corsican	6779	Kannada	7578	Rumanian	8279	Uzbek	8590
Croatian	7282	Kashmiri	7583	Russian	8285	Vietnamese	8673
Czech	6783	Kazakh	7575	Samoan	8377	Volapük	8679
Danish	6865	Kirghiz	7589	Sanskrit	8365	Welsh	6789
Dutch	7876	Korean	7579	Scots Gaelic	7168	Wolof	8779
English	6978	Kurdish	7585	Serbian	8382	Xhosa	8872
Esperanto	6979	Laothian	7679	Serbo-Croatian	8372	Yiddish	7473
Estonian	6984	Latin	7665	Shona	8378	Yoruba	8979
Faroese	7079	Latvian, Lettish	7686	Sindhi	8368	Zulu	9085

Enter the appropriate code number for setting up the "Area Code".

CODE Country	CODE Country	CODE Country	CODE Country	CODE Country	CODE Country
AF Afghanistan	TD Chad	DE Germany	LU Luxembourg	PG Papua New Guinea	SJ Svalbard and Jan Mayen
AL Albania	CL Chile	GH Ghana	MO Macau	PY Paraguay	SZ Swaziland
DZ Algeria	CN China	GI Gibraltar	MK Macedonia	PE Peru	SE Sweden
AS American Samoa	CX Christmas Island	GB Great Britain	MG Madagascar	PH Philippines	CH Switzerland
AD Andorra	CC Cocos (Keeling) Islands	GR Greece	MW Malawi	PN Pitcairn Island	SY Syria
AO Angola	CO Colombia	GL Greenland	MY Malaysia	PL Poland	TJ Tadjikistan
AI Anguilla	KM Comoros	GD Grenada	MV Maldives	PF Polynesia (French)	TW Taiwan
AQ Antarctica	CG Congo	GP Guadeloupe (French)	MT Malta	PT Portugal	TZ Tanzania
AG Antigua and Barbuda	CK Cook Islands	GU Guam (USA)	MH Marshall Islands	PR Puerto Rico	TH Thailand
AR Argentina	CR Costa Rica	GT Guatemala	MQ Martinique (French)	QA Qatar	TG Togo
AM Armenia	HR Croatia	GN Guinea	MR Mauritania	RE Reunion (French)	TK Tokelau
AW Aruba	CU Cuba	GW Guinea Bissau	MU Mauritius	RO Romania	TO Tonga
AU Australia	CY Cyprus	GY Guyana	YT Mayotte	RU Russian Federation	TT Trinidad and Tobago
AT Austria	CZ Czech Republic	HT Haiti	MX Mexico	RW Rwanda	TN Tunisia
AZ Azerbaidjan	DK Denmark	HM Heard and McDonald Islands	FM Micronesia	GS S. Georgia & S. Sandwich Isls.	TR Turkey
BS Bahamas	DJ Djibouti	HN Honduras	MD Moldavia	SH Saint Helena	TM Turkmenistan
BH Bahrain	DM Dominica	HK Hong Kong	MC Monaco	KN Saint Kitts & Nevis Anguilla	TC Turks and Caicos Islands
BD Bangladesh	DO Dominican Republic	HU Hungary	MN Mongolia	LC Saint Lucia	TV Tuvalu
BE Belarus	TP East Timor	IS Iceland	MS Montserrat	PM Saint Pierre and Miquelon	UG Uganda
BY Belgium	EC Ecuador	IN India	MA Morocco	ST Saint Tome and Principe	UA Ukraine
BZ Belize	EG Egypt	ID Indonesia	MZ Mozambique	VC Saint Vincent & Grenadines	AE United Arab Emirates
BJ Benin	SV El Salvador	IR Iran	MM Myanmar	WS Samoa	US United States
BM Bermuda	GQ Equatorial Guinea	IQ Iraq	NA Namibia	SM San Marino	UY Uruguay
BT Bhutan	ER Eritrea	IE Ireland	NR Nauru	SA Saudi Arabia	UM USA Minor Outlying Islands
BO Bolivia	EE Estonia	IL Israel	NL Netherlands	SN Senegal	UZ Uzbekistan
BA Bosnia-Herzegovina	ET Ethiopia	IT Italy	AN Netherlands Antilles	SC Seychelles	VU Vanuatu
BW Botswana	FK Falkland Islands	CI Ivory Coast	NC New Caledonia (French)	SL Sierra Leone	VA Vatican City State
BV Bouvet Island	FO Faroe Islands	JM Jamaica	NZ New Zealand	SG Singapore	VE Venezuela
BR Brazil	FJ Fiji	JP Japan	NI Nicaragua	SK Slovak Republic	VN Vietnam
IO British Indian Ocean Territory	FI Finland	JO Jordan	NE Niger	SI Slovenia	VG Virgin Islands (British)
BN Brunei Darussalam	CS Former Czechoslovakia	KZ Kazakhstan	NG Nigeria	SB Solomon Islands	VI Virgin Islands (USA)
BG Bulgaria	SU Former USSR	KE Kenya	NU Niue	SO Somalia	WF Wallis and Futuna Islands
BF Burkina Faso	FR France	KI Kiribati	NF Norfolk Island	ZA South Africa	EH Western Sahara
BI Burundi	FX France (European Territory)	KW Kuwait	NP North Korea	KR South Korea	YE Yemen
KH Cambodia	GF French Guyana	KG Kyrgyzstan	MP Northern Mariana Islands	ES Spain	YU Yugoslavia
CM Cameroon	TF French Southern Territories	LA Laos	NO Norway	LK Sri Lanka	ZR Zaire
CA Canada	GA Gabon	LV Latvia Islands	OM Oman	SD Sudan	ZM Zambia
CV Cape Verde	GM Gambia	LB Lebanon	PK Pakistan	SR Suriname	ZW Zimbabwe
KY Cayman Islands	GE Georgia	LS Lesotho	PW Palau		
CF Central African Republic		LR Liberia	PA Panama		
		LY Libya			
		LI Liechtenstein			
		LT Lithuania			

REFERENCE

TROUBLESHOOTING

CONDITION	POSSIBLE CAUSES	POSSIBLE SOLUTIONS
No power.	<ul style="list-style-type: none"> The power cord is disconnected. 	<ul style="list-style-type: none"> Plug the power cord into the wall outlet securely.
The power is on, but the M56 does not work.	<ul style="list-style-type: none"> No disc is inserted. 	<ul style="list-style-type: none"> Insert a disc.
No picture.	<ul style="list-style-type: none"> The TV is not set to receive video input signal from the M56 	<ul style="list-style-type: none"> Select the appropriate video input mode on the TV.
	<ul style="list-style-type: none"> The video cable is not connected securely. 	<ul style="list-style-type: none"> Connect the video cable securely.
	<ul style="list-style-type: none"> Mismatched resolution setting between the M56 and the TV. 	<ul style="list-style-type: none"> Check TV capability. Set the Resolution according to your TV's capability.
No sound.	<ul style="list-style-type: none"> The connected equipment is not capable of detecting or decoding audio signal from the M56. 	<ul style="list-style-type: none"> Connect the audio output of the M56 to an equipment with appropriate audio decoders.
	<ul style="list-style-type: none"> The power of the equipment connected with the audio cable is turned off. 	<ul style="list-style-type: none"> Turn on the equipment connected with the audio cable.
	<ul style="list-style-type: none"> The AUDIO output settings are incorrect. 	<ul style="list-style-type: none"> Check audio output settings as configured in the Audio Setup menu.
The M56 does not start playback.	<ul style="list-style-type: none"> An unplayable disc is inserted. 	<ul style="list-style-type: none"> Insert a playable disc. (Check the disc type and regional code.)
	<ul style="list-style-type: none"> The rating level is set. 	<ul style="list-style-type: none"> Cancel the rating function or change the rating level.
BD-Live feature does not work.	<ul style="list-style-type: none"> Internet connection is not established. 	<ul style="list-style-type: none"> Ensure that the M56 is connected to the local area network and can access the internet.
The remote control does not work properly.	<ul style="list-style-type: none"> M56 front panel is in very bright sunlight or ambient light. 	<ul style="list-style-type: none"> Reduce sunlight/room lighting.
	<ul style="list-style-type: none"> IR transmitter window on remote or IR receiver window is obstructed. 	<ul style="list-style-type: none"> Check IR windows and ensure clear line-of-sight from remote to M56.
	<ul style="list-style-type: none"> The remote control batteries are dead. 	<ul style="list-style-type: none"> Replace the remote control batteries.

NOTES ON DISCS

HANDLING DISCS

Do not touch the playback side of the disc. Hold the disc by the edges so that fingerprints do not get on the surface. Never stick paper or tape on the disc.




STORING DISCS

After playing, store the disc in its case. Do not expose the disc to direct sunlight or sources of heat and never leave it in a parked car exposed to direct sunlight.

CLEANING DISCS

Fingerprints and dust on the disc can cause poor picture quality and sound distortion. Before playing, clean the disc with a clean cloth. Wipe the disc from the center out.

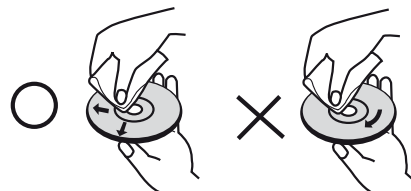

Do not use strong solvents such as alcohol, benzene, thinner, commercially available cleaners, or anti-static spray intended for older vinyl records.

SYSTEM

Signal system	Auto/NTSC/PAL (European version model only) NTSC (North America version model only)
Laser	Semiconductor laser
Frequency response	±2dB (Ref. 0dB 20 Hz – 20 kHz)
Signal-to-noise ratio	>100dB (A-WTD, analog OUT)
Dynamic range	>95 dB
Total Harmonic Distortion	<0.008 %
LAN port	Ethernet jack, 10 Base-T/100 Base-TX
Wireless LAN (internal antenna)	Integrated IEEE 802.11n* (Draft 2.0) wireless networking access, compatible with 802.11b/g Wi-Fi networks.
Internal Flash Memory	1GB

OUTPUT

Output format	Video OUT: up to 480i/576i Component video OUT: up to 1080i HDMI OUT: up to 1080p
Video out	1Vp-p/75 ohms
Component (Y signal)	1Vp-p/75 ohms
Component (Pb/Pr signal)	0.7Vp-p/75 ohms
Audio output level	2.0Vrms (Ref. 1 kHz, 0 dB)
7.1 channel audio output	2.0Vrms (Ref. 1 kHz, 0 dB)
HDMI version	1.3b
Digital out (coaxial)	0.5Vp-p
Digital out (optical)	3Vp-p

GENERAL

Power requirements	AC 110V - 240V 50/60 Hz
Standby power	<0.7W
Unit Dimension (W x H x D)	435 x 114 x 305 mm (Gross)**
Net weight	8.5 kg
Shipping weight	14 kg

* - IEEE 802.11n is not applicable to M56's Russian version model.

** - Gross dimensions include feet, extended buttons and rear panel terminals.

Specifications are subject to change without notice. For updated documentation and features, please log onto www.NADelectronics.com for the latest information about M56.

Manufactured under license under U.S. Patent #'s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,226,616; 6,487,535 & other U.S. and worldwide patents issued & pending. DTS is a registered trademark and the DTS logos, Symbol, DTS-HD and DTS-HD Advanced Digital Out are trademarks of DTS, Inc. © 1996-2008 DTS, Inc. All Rights Reserved.

Manufactured under License from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

DivX, DivX Certified, and associated logos are trademarks of DivX, Inc. and are used under license.

HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

"Blu-ray Disc" is a trademark.

"BD-LIVE" logo is a trademark of Blu-ray Disc Association.

Java and all Java-based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States and other countries.

DLNA and DLNA CERTIFIED are trademarks and/or service marks of Digital Living Network Alliance.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.



www.NADelectronics.com

**2010 NAD ELECTRONICS INTERNATIONAL
A DIVISION OF LENBROOK INDUSTRIES LIMITED**

All rights reserved. NAD and the NAD logo are trademarks of NAD Electronics International, a division of Lenbrook Industries Limited.
No part of this publication may be reproduced, stored or transmitted in any form without the written permission of NAD Electronics International.

M56 Manual Issue 2.7-03/10