

NAD C 390DD MDC **MODULE INSTALLATION**


Date: June 7, 2012

Document Number: TD2012-01A- DD HDMI-1/DD AP-1

The DD HDMI-1 and DD AP-1 are both optional modules for the C 390DD model. One or both modules can be installed in a standard C 390DD unit. The following procedure is presented with both modules available.

Step 1

Remove the DD AP-1 and/or DD HDMI-1 modules from their boxes. Install their respective back plates by using the screws provided. Carefully remove the yellow protective tape from the gold connectors.

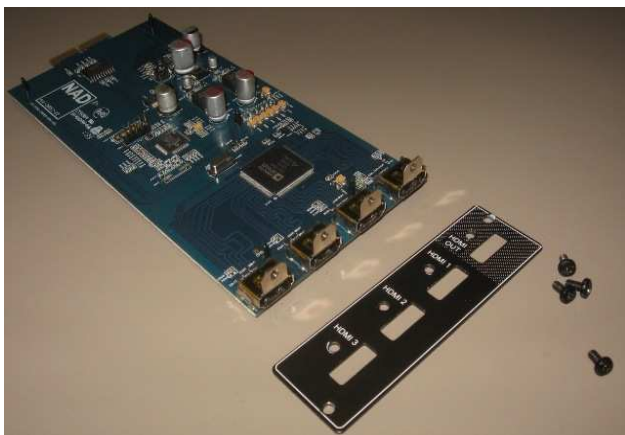

Step 2

Remove C 390DD's top cover.




Step 3

Install first the DD HDMI-1 module. Loosen and remove the screws of the MDC upgrade panel cover of the unit as shown below. Position and align the DD HDMI-1 with respect to the slot. Once aligned with the slot, slide the module along the track.



Ensure that the DD HDMI-1 module is completely seated with respect to the connector as shown below.

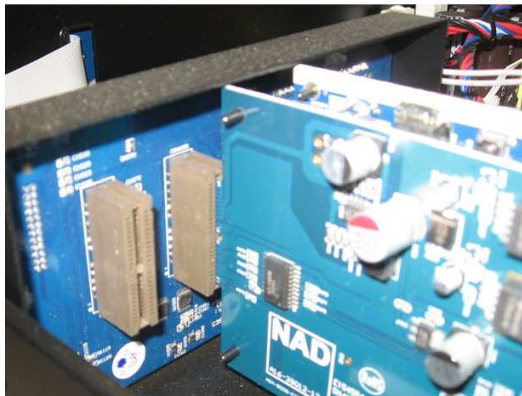

Step 4

Reinstall the cover panel to fix the module into place.




Step 5

Repeat Step 3 to 4 for the installation of DD AP-1 module. (If applicable)

Please note the DD AP-1 is keyed to be installed in the far left upgrade slot of the C 390DD unit.



Ensure that DD AP-1 is completely seated with respect to the connector as shown below.

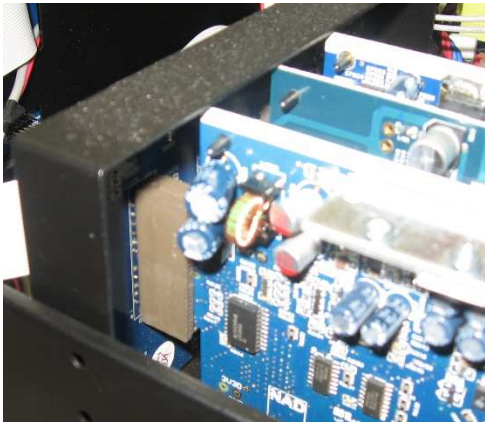

Step 6

With the modules installed, put back and fix into place the top cover using corresponding screws.